

HP StorageWorks

Enterprise File Services WAN Accelerator 1.2 installation and configuration guide



393931-002

Part number: 393931-002
First edition: May 2005



Legal and notice information

© Copyright 2005 Hewlett-Packard Development Company, L.P.

© Copyright 2003–2005 Riverbed Technology, Inc.

Hewlett-Packard Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard. The information is provided “as is” without warranty of any kind and is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Linux is a trademark of Linus Torvalds in the United States and in other countries.

Microsoft, Windows, Windows NT, Windows 2000, Outlook, and Windows Internet Explorer are trademarks or registered trademarks of Microsoft Corporation in the United States and in other countries.

UNIX is a registered trademark in the United States and in other countries, exclusively licensed through X/Open Company, Ltd.

Parts of this product are derived from the following software:

Apache © 2000-2003 The Apache Software Foundation. All rights reserved.

bsdstr.c, © 1998 Todd C. Miller (Todd.Miller@courtesan.com). All rights reserved.

Busybox, © Eric Andersen

Less © 1984-2002 Mark Nudelman

Libevent, © 2000-2002 Niels Provos. All rights reserved.

LibGD, Version 2.0 licensed by Boutell.Com, Inc.

Libtecla, © 2000, 2001 by Martin C. Shepherd. All rights reserved.

Linux Kernel, © Linus Torvalds

md5, md5.cc, © 1995 University of Southern California. All rights reserved. © 1991-2, RSA Data Security, Inc. All rights reserved.

my_getopt.{c,h}, © 1997, 2000, 2001, 2002, Benjamin Sittler. All rights reserved.

NET-SNMP: © 1989, 1991, 1992 by Carnegie Mellon University. All rights reserved.

OpenSSH, © 2002 Nils Nordman. All rights reserved.

ptmalloc © 2001 Wolfram Gloger

sSMTP, © Mark Ryan, Hugo Haas, Christoph Lameter, and Dave Collier-Brown

Vixie-Cron, © 1988, 1990, 1993, 1994 by Paul Vixie. All rights reserved.

Zile, © 1997-2001 Sandro Sigalam © 2003 Reuben Thomas. All rights reserved.

For detailed copyright and license agreements, see the *HP StorageWorks Enterprise File Services WAN Accelerator Installation and Configuration Guide*. For modified source code (where required), see the HP technical support site at <http://www.hp.com>.

Certain libraries were used in the development of this software, licensed under GNU Lesser General Public License, Version 2.1, February 1999. For the copyright and license agreement, see the *HP StorageWorks Enterprise File Services WAN Accelerator Installation and Configuration Guide*. For a list of libraries and source material (where required), see the HP technical support site at <http://www.hp.com>.

Enterprise File Services WAN Accelerator 1.2 installation and configuration guide

Contents

Introduction	5
About This Guide.....	5
Types of Users	5
Organization of This Guide	5
Document Conventions	6
Hardware and Software Dependencies	8
Ethernet Network Compatibility	8
Antivirus Compatibility	8
Additional Resources	9
Related HP Documentation	9
Online Documentation	9
Related Reading	9
Safety Guidelines	10
Equipment Guidelines	10
Rack Guidelines	10
Contacting HP	11
Technical Support.....	11
HP Storage Web Site.....	12
HP NAS Services Web Site	12
 Chapter 1 Overview of the HP EFS WAN Accelerator	 13
Overview of the HP EFS WAN Accelerator.....	13
Definition of Terms	13
Bypass Mode	14
 Chapter 2 Installing and Configuring the HP EFS WAN Accelerator	 17
Design and Deployment Overview	17
Checking Your Inventory	19
Preparing Your Site for Installation	19

Required Tools and Equipment.....	19
Required Configuration Information.....	20
Mounting the HP EFS WAN Accelerator to a Rack.....	21
HP ProLiant DL320-510, DL320-1010, and DL320-2010 Hardware	21
HP ProLiant DL380-3010 and DL380-5010 Hardware.....	23
NIC Port LabelingTerminology Note	25
Powering On the HP EFS WAN Accelerator	25
HP System Management Homepage v2.0.....	26
Integrated Lights-Out.....	26
Connecting to the HP EFS WAN Accelerator.....	26
Configuring In-Path HP EFS WAN Accelerators.....	28
Configuring Your Speed and Duplex Settings.....	29
Connecting the HP EFS WAN Accelerator to Your Network.....	32
Verifying Your Connections	33
Connecting to the Management Console	33
Verifying Your Configuration	34
Configuring Out-of-Path HP EFS WAN Accelerators.....	35
Configuring Your Speed and Duplex Settings.....	35
Configuring the Server-Side Appliance	36
Connecting the HP EFS WAN Accelerator to Your Network.....	38
Configuring the Client-Side HP EFS WAN Accelerator	39
SMB Signing and Windows Performance	40
Disabling SMB Signing Using Active Directory	40
Enabling the Secure-CIFS Feature.....	43
Chapter 3 Advanced Network Deployments	45
In-Path Deployments.....	46
In-Path, Failover Support	46
In-Path, Two Routing Points.....	47
In-Path, Server-Side.....	48
In-Path, Server-Side, 1:1.....	50
In-Path, Load Balanced, Layer-4 Switch	52
Out-of-Path Deployments.....	55
Out-of-Path, Failover Support	55
Out-of-Path, Static Cluster	58
Mixed Deployments	59
Hybrid: In-Path and Out-of-Path	60
WCCP	62
PBR.....	66

Chapter 4	Recovering from a Disaster	69
	Recovery Procedure.....	69
Chapter 5	Replacing HP EFS WAN Accelerator Components	71
Appendix A	Technical Specifications and Regulatory Information	73
Appendix B	HP EFS WAN Accelerator Ports	75
	Default Ports	75
	Commonly Optimized Ports	75
	Interactive Ports Automatically Forwarded by the HP EFS WAN Accelerator	76
	Secure Ports Automatically Forwarded by the HP EFS WAN Accelerator	76
Appendix C	Software Licenses	79
Glossary	99
Index	101

Introduction

In This Introduction

Welcome to the *HP StorageWorks Enterprise File Services WAN Accelerator Installation and Configuration Guide*. Read this introduction for an overview of the information provided in this guide and for an understanding of the documentation conventions used throughout. This introduction contains the following sections:

- ◆ [“About This Guide,”](#) next
- ◆ [“Hardware and Software Dependencies”](#) on page 8
- ◆ [“Ethernet Network Compatibility”](#) on page 8
- ◆ [“Antivirus Compatibility”](#) on page 8
- ◆ [“Additional Resources”](#) on page 9
- ◆ [“Safety Guidelines”](#) on page 10
- ◆ [“Contacting HP”](#) on page 11

About This Guide

The *HP StorageWorks Enterprise File Services WAN Accelerator Installation and Configuration Guide* describes how to install and configure the HP StorageWorks Enterprise File Services WAN Accelerator.

Types of Users

This guide is written for storage and network administrators with familiarity administering and managing networks using Common Internet File System (CIFS), HyperText Transport Protocol (HTTP), File Transfer Protocol (FTP), and Microsoft Exchange.

Organization of This Guide

The *HP StorageWorks Enterprise File Services WAN Accelerator Installation and Configuration Guide* includes the following chapters:

- ◆ [Chapter 1, “Overview of the HP EFS WAN Accelerator,”](#) introduces the HP EFS WAN Accelerator.
- ◆ [Chapter 2, “Installing and Configuring the HP EFS WAN Accelerator,”](#) describes how to install and configure the HP EFS WAN Accelerator.

- ◆ [Chapter 3, “Advanced Network Deployments,”](#) describes advanced network configurations and outlines the basic steps for deploying them.
- ◆ [Chapter 5, “Replacing HP EFS WAN Accelerator Components,”](#) describes how to replace HP EFS WAN Accelerator hard-disk drives and power supply units.
- ◆ [Appendix A, “Technical Specifications and Regulatory Information,”](#) provides product technical specifications, environmental specifications, and regulatory information for the HP EFS WAN Accelerator.
- ◆ [Appendix B, “HP EFS WAN Accelerator Ports,”](#) provides a list of default ports, and interactive and secure ports automatically forwarded by the HP EFS WAN Accelerator.
- ◆ [Appendix C, “Software Licenses,”](#) provides the copyright material and license agreements for the software used in the development of the HP EFS WAN Accelerator software.

A glossary of terms follows the chapters, and a comprehensive index directs you to areas of particular interest.

Document Conventions

This manual uses the following standard set of typographical conventions to introduce new terms, illustrate screen displays, describe command syntax, and so forth.

Convention	Meaning
<i>italics</i>	Within text, new terms and emphasized words appear in italics.
boldface	Within text, commands, keywords, identifiers (names of classes, objects, constants, events, functions, program variables), environment variables, filenames, Graphical User Interface (GUI) controls, and other similar terms appear in boldface typeface.

Convention	Meaning
Courier	Information displayed on your terminal screen and information that you are instructed to enter appear in a Courier typeface.
KEYSTROKE	Keys that you are to press appear in uppercase letters in Helvetica font.
< >	Within syntax descriptions, values that you specify appear in angle brackets. For example: interface <ipaddress>
[]	Within syntax descriptions, optional keywords or variables appear in brackets. For example: ntp peer <addr> [version <number>]
{ }	Within syntax descriptions, required keywords or variables appear in braces. For example: {delete <filename> upload <filename>}
	Within syntax descriptions, the pipe symbol represents a choice to select one keyword or variable to the left or right of the symbol. (The keyword or variable can be either optional or required.) For example: {delete <filename> upload <filename>}

Hardware and Software Dependencies

The following table summarizes the hardware and software requirements for the HP EFS WAN Accelerator.

HP Component	Hardware and Software Requirements
HP EFS WAN Accelerator	<ul style="list-style-type: none">• 19 inch (483 mm) two or four-post rack.
HP EFS WAN Accelerator Management Console, HP StorageWorks Enterprise File Services WAN Accelerator Manager	<ul style="list-style-type: none">• Any computer that supports a Web browser with color image display.• The Management Console has been tested with Mozilla, version, 1.2.1 and Microsoft Internet Explorer version 6.0x. <p>NOTE: Javascript and cookies must be enabled in your Web browser.</p>

Ethernet Network Compatibility

The HP EFS WAN Accelerator supports the following types of Ethernet networks:

- ◆ Fast Ethernet (IEEE 802.3u 100BaseTX)
- ◆ Gigabit Ethernet over Copper (IEEE 802.3ab 1000Base-T)

In-path HP EFS WAN Accelerator ports are Fast Ethernet auto-sensing.

The NIC1 (Primary) port in the HP EFS WAN Accelerator is 10/100/1000 Mbps auto-sensing. The HP EFS WAN Accelerator supports Jumbo Frames.

The HP EFS WAN Accelerator supports VLAN 802.1q. The HP EFS WAN Accelerator does not support the Cisco InterSwitch Link (ISL) protocol.

Antivirus Compatibility

The HP EFS WAN Accelerator has been tested with the following antivirus software with no impact on performance:

- ◆ Network Associates (McAfee) VirusScan 7.0.0 Enterprise on the server
- ◆ Network Associates (McAfee) VirusScan 7.1.0 Enterprise on the server
- ◆ Network Associates (McAfee) VirusScan 7.1.0 Enterprise on the client
- ◆ Symantec (Norton) AntiVirus Corporate Edition 8.1 on the server

The HP EFS WAN Accelerator has been tested with the following antivirus software with a noticeable to moderate impact on performance:

- ◆ F-Secure Anti-Virus 5.43 on the client

- ◆ F-Secure Anti-Virus 5.5 on the server
- ◆ Network Associates (McAfee) NetShield 4.5 on the server
- ◆ Network Associates VirusScan 4.5 for multi-platforms on the client
- ◆ Symantec (Norton) AntiVirus Corporate Edition 8.1 on the client

Additional Resources

This section describes the following resources that supplement the information in this guide:

- ◆ Release notes
- ◆ Related HP documentation
- ◆ Related technical reference books

Related HP Documentation

You can access the complete document set for the HP EFS WAN Accelerator from the documentation set CD-ROM:

- ◆ *HP EFS WAN Accelerator Management Console User's Guide* describes how to manage and administer an HP EFS WAN Accelerator using the Management Console.
- ◆ *HP EFS WAN Accelerator Command-Line Interface Reference Manual* is a reference manual for the HP EFS WAN Accelerator command-line interface. It lists commands, syntax, parameters, and example usage.
- ◆ *HP StorageWorks Enterprise File Services WAN Accelerator Manager User's Guide* describes how to install, configure, and administer a network made up of multiple HP EFS WAN Accelerators using the HP StorageWorks Enterprise File Services WAN Accelerator Manager.

Online Documentation

The HP EFS WAN Accelerator documentation set is periodically updated with new information. To access the most current version of the HP EFS WAN Accelerator documentation and other technical information, consult the HP technical support site located at <http://www.hp.com>.

Related Reading

To learn more about network administration, consult the following books:

- ◆ *Microsoft Windows 2000 Server Administrator's Companion* by Charlie Russell and Sharon Crawford (Microsoft Press, January 2000)
- ◆ *Common Internet File System (CIFS) Technical Reference* by the Storage Networking Industry Association (Storage Networking Industry Association, 2002)
- ◆ *TCP/IP Illustrated, Volume I, The Protocols* by W. R. Stevens (Addison-Wesley, 1994)
- ◆ *Internet Routing Architectures (2nd Edition)* by Bassam Halabi (Cisco Press, 2000)

Safety Guidelines

Follow these safety precautions when installing and setting up your equipment.

IMPORTANT: Failure to follow these safety guidelines can result in injury or damage to the HP EFS WAN Accelerator. Mishandling of the HP EFS WAN Accelerator voids all warranties. Please read and follow safety guidelines and installation instructions carefully.

Equipment Guidelines

Follow these safety guidelines when you install, setup, or remove components in the HP EFS WAN Accelerator:

- ◆ Follow all caution and warning instructions in this manual and marked on the equipment.
- ◆ Do not block or cover the openings to the HP EFS WAN Accelerator. Do not install the HP EFS WAN Accelerator in or near a plenum, air duct, radiator, or heat register.
- ◆ Do not make mechanical modifications to the HP EFS WAN Accelerator. HP is not responsible for the regulatory compliance of HP equipment that has been modified.
- ◆ Make sure that the area in which you install the HP EFS WAN Accelerator is properly ventilated and climate-controlled. For detailed information regarding environmental requirements, see [Appendix A, “Technical Specifications and Regulatory Information.”](#)
- ◆ Use caution when you remove or replace system components; they can become hot to the touch.
- ◆ Ensure that the voltage and frequency of your power source match the voltage and frequency inscribed on the electrical rating label of the equipment.
- ◆ Never push objects of any kind through openings in the equipment. Dangerous voltages can be present. Conductive foreign objects could produce a short circuit and cause fire, electric shock, or damage to your equipment.
- ◆ The HP ProLiant DL380-3010 and DL380-5010 can weigh up to 60 pounds (27.22 kg), and the HP ProLiant DL320-510, DL320-1010, and DL320-2010 can weigh up to 37 pounds (16.78 kg). Lift the HP EFS WAN Accelerator using both hands and with your knees bent.
- ◆ The HP EFS WAN Accelerator might have more than one power cord. To reduce the risk of electrical shock, disconnect all power cords before servicing the appliance.

Rack Guidelines

Prior to installing the HP EFS WAN Accelerator in a rack, adhere to the following rack installation guidelines:

- ◆ The rack cannot have solid or restricted airflow doors. You must use a mesh door on the front and back of the rack or remove the doors to ensure adequate air flow to the system.
- ◆ Use a two or four post mounting rack.
- ◆ The rack width and depth must allow for proper serviceability and cable management.
- ◆ Make sure the rack is properly secured to the floor or ceiling.

IMPORTANT: Please ensure that there is adequate airflow in the rack. Improper installation or restricted airflow can damage the equipment.

Contacting HP

This section describes how to contact departments within HP.

NOTE: Do not load any other software on your HP StorageWorks EFS WAN Accelerator, as doing so will void your support agreement and you will not be able to receive HP technical support.

Technical Support

Telephone numbers for worldwide technical support are listed on the following HP web site: <http://www.hp.com/support>. From this web site, select the country of origin. For example, the North American technical support number is 800-633-3600.

NOTE: For continuous quality improvement, calls may be recorded or monitored.

Be sure to have the following information available before calling:

- ◆ Technical support registration number (if applicable)
- ◆ Product serial numbers
- ◆ Product model names and numbers
- ◆ Applicable error messages
- ◆ Operating system type and revision level
- ◆ Detailed, specific questions

HP Storage Web Site

The HP web site has the latest information on this product, as well as the latest drivers. Access the storage site at: <http://www.hp.com/country/us/eng/prodserv/storage.html>. From this web site, select the appropriate product or solution.

HP NAS Services Web Site

The HP NAS Services site allows you to choose from convenient HP Care Pack Services packages or implement a custom support solution delivered by HP ProLiant Storage Server specialists and/or our certified service partners. For more information see us at http://www.hp.com/hps/storage/ns_nas.html.

CHAPTER 1

Overview of the HP EFS WAN Accelerator

In This Chapter

This chapter provides an overview of the HP EFS WAN Accelerator. This chapter includes the following sections:

- ◆ [“Overview of the HP EFS WAN Accelerator”](#) next

Overview of the HP EFS WAN Accelerator

The HP EFS WAN Accelerator uses scalable data referencing (SDR) and transaction prediction to optimize throughput and save bandwidth on Wide Area Networks (WANs). With the HP EFS WAN Accelerator, you can improve the performance of your applications without interfering with your existing systems.

Definition of Terms

The following terms are used to describe features, attributes, and processes in the HP EFS WAN Accelerator:

- ◆ **Optimization.** The process of increasing data throughput and network performance over the WAN using the HP EFS WAN Accelerator. An optimized connection exhibits bandwidth reduction as it traverses the WAN due to the HP EFS WAN Accelerator.
- ◆ **Scalable Data Referencing.** The proprietary algorithms that allow an arbitrarily large amount of data to be represented by a small number of references to the HP EFS WAN Accelerator data store. As data flows through the HP EFS WAN Accelerator, all Transmission Control Protocol (TCP) traffic is mapped onto references to data that is stored on either side of the link. This technology increases WAN network performance and decreases consumed bandwidth.
- ◆ **Auto-discovery.** Auto-discovery is the process by which the HP EFS WAN Accelerator automatically intercepts and optimizes traffic on all Internet Protocol (IP) addresses and ports. By default, auto-discovery is applied to IP addresses and the ports which are not secure or interactive.

- ◆ **Fixed Target.** Fixed target rules directly specify out-of-path HP EFS WAN Accelerators near the target server. Determine which servers you would like a particular HP EFS WAN Accelerator to optimize (and, optionally, which ports), and add rules to specify the network of servers, ports, and out-of-path HP EFS WAN Accelerators to use.
- ◆ **Pass-Through.** Pass-through describes WAN traffic that traverses the network unoptimized. You define pass-through rules to exclude subnets from optimization. Traffic is also passed through when the device is in bypass mode. Pass-through might be due to in-path rules or because the connection was established before the HP EFS WAN Accelerator was put in place or before the service was enabled.
- ◆ **Bypass.** The HP EFS WAN Accelerator is equipped with a fail-through card to prevent a single point of failure. If there is a serious problem with the HP EFS WAN Accelerator, it goes into bypass mode and the traffic is passed-through unoptimized. For detailed information, see [“Bypass Mode” on page 14](#).
- ◆ **Failover.** You can deploy redundant HP EFS WAN Accelerators in your network to ensure optimization continues if there is a failure in one of the HP EFS WAN Accelerators. You can enable failover support in the Management Console or you can use the HP EFS WAN Accelerator command-line interface.

Bypass Mode

The HP EFS WAN Accelerator is equipped with the Adlink Gigabit Ethernet Card with fail-through interface.

If there is a serious problem with the HP EFS WAN Accelerator, it goes into bypass mode to prevent a single point of failure. If the HP EFS WAN Accelerator is in bypass mode, you are notified in the following ways:

- ◆ The Intercept/Bypass status light on the fail-through interface is off.
- ◆ The Welcome page of the Management Console displays **Critical** in the Status box.
- ◆ Simple Network Management Protocol (SNMP) traps are sent.
- ◆ The event is logged to system logs (**syslog**).
- ◆ Email notifications are sent (if you have set this option).

When the HP EFS WAN Accelerator is in bypass mode the traffic passes through uninterrupted. Traffic that was optimized might be interrupted, depending on the behavior of the application-layer protocols. When connections are restored, they succeed, although without optimization.

In a one appliance, out-of-path deployment, if the HP EFS WAN Accelerator fails, the first connection from the client fails. After detecting that the HP EFS WAN Accelerator is down, an HP EFS WAN Accelerator **ping** channel is setup from the client-side HP EFS WAN Accelerator to the server-side HP EFS WAN Accelerator. Subsequent connections are passed through unoptimized. When the HP EFS WAN Accelerator **ping** succeeds, processing is restored and subsequent connections are intercepted and optimized.

When the fault is corrected, new connections that are made receive optimization, however connections made during the fault are not. To force all connections to be optimized, enable the *kickoff* feature. Generally, connections are short lived and kickoff is not necessary. It is suitable for very challenging remote environments. For detailed information about enabling the kickoff feature, see the *HP EFS WAN Accelerator Management Console User's Guide*.

IMPORTANT: HP EFS WAN Accelerator software Version 1.2 is compatible with Version 1.1.4 and newer versions. Version 1.1.4 and newer versions cannot communicate with Version 1.1.3 and older release installations due to a software protocol version change. If you are running Version 1.1.3, you must upgrade all the appliances in your network at the same time. If you are running Version 1.1.4 or later, you can mix and match versions of the HP EFS WAN Accelerator software (for example, 1.1.4 with 1.1.6). HP recommends you do not operate HP EFS WAN Accelerators in a mixed environment.

CHAPTER 2

Installing and Configuring the HP EFS WAN Accelerator

In This Chapter

This chapter describes how to install and configure the HP EFS WAN Accelerator. This chapter includes the following sections:

- ◆ [“Design and Deployment Overview,”](#) next
- ◆ [“Checking Your Inventory”](#) on page 19
- ◆ [“Preparing Your Site for Installation”](#) on page 19
- ◆ [“Required Tools and Equipment”](#) on page 19
- ◆ [“Required Configuration Information”](#) on page 20
- ◆ [“Mounting the HP EFS WAN Accelerator to a Rack”](#) on page 21
- ◆ [“Powering On the HP EFS WAN Accelerator”](#) on page 25
- ◆ [“Connecting to the HP EFS WAN Accelerator”](#) on page 26
- ◆ [“Configuring In-Path HP EFS WAN Accelerators”](#) on page 28
- ◆ [“Configuring Out-of-Path HP EFS WAN Accelerators”](#) on page 35
- ◆ [“SMB Signing and Windows Performance”](#) on page 40

IMPORTANT: Please read and follow the safety guidelines described in [“Safety Guidelines”](#) on page 10. Failure to follow these safety guidelines can result in damage to the equipment.

Design and Deployment Overview

The following section summarizes the factors you need to consider before deploying the HP EFS WAN Accelerator in your network.

When you deploy the HP EFS WAN Accelerator, you must consider the following elements for each side (that is, the client and server-side) of your network.

1. Determine what kind of site you have:

- ◆ **User Locations.** An office that has users but no servers accessed by the other sites.
 - ◆ **Server Locations (Data Centers).** A central server location that remote offices access data from.
 - ◆ **Users and Servers.** A site that has users and servers that are accessed remotely.
2. Determine what kind of Wide Area Network (WAN) routing infrastructure you have. For example, do you have one or two WAN routers?
 3. How much bandwidth do you use? If you use large amounts of bandwidth, you need to consider deploying multiple HP EFS WAN Accelerators using a Layer-4 switch or deploying the HP EFS WAN Accelerator in a static cluster. (If you do not want to deploy multiple HP EFS WAN Accelerators, you can also deploy the HP EFS WAN Accelerator using the Web Cache Communication Protocol (WCCP) in networks with large bandwidth requirements.)
 4. Choose a network template:
 - ◆ **In-Path.** The HP EFS WAN Accelerator is in the direct path between the client and the server. The client transparently communicates to the server; the server transparently communicates to the client, and there are HP EFS WAN Accelerators in between. In-path configurations are suitable for any location if the total bandwidth is within the limits of the installed HP EFS WAN Accelerator. For a detailed figure, see [“Configuring In-Path HP EFS WAN Accelerators” on page 28.](#)
 - ◆ **Out-of-Path.** The HP EFS WAN Accelerator is not in the direct path between the client and the server. An out-of-path configuration is suitable for data center locations where applications connect to the servers. For a detailed figure, see [“Configuring Out-of-Path HP EFS WAN Accelerators” on page 35.](#)
 5. Determine how many HP EFS WAN Accelerators you need for your site:
 - ◆ One HP EFS WAN Accelerator is typically deployed in network environments with small to moderate bandwidth requirements.
 - ◆ Two HP EFS WAN Accelerators are deployed for redundancy in network environments where network outages cannot be tolerated.
 - ◆ Two HP EFS WAN Accelerators are deployed in network environments with multiple WAN links.
 - ◆ Multiple HP EFS WAN Accelerators are deployed in large sites using WCCP, Layer-4 switches or in static cluster configurations.

For detailed information about advanced network configurations such as redundant appliances, Layer-4 switch, Web Cache Communication Protocol (WCCP), and Policy Based Routing (PBR), see [“Advanced Network Deployments” on page 45.](#)

Checking Your Inventory

Your shipping carton contains the following items:

- ◆ The HP EFS WAN Accelerator—the HP ProLiant DL320-510, DL320-1010, or DL320-2010, or the HP ProLiant DL380-3010 or DL380-5010 (depending on your order)
- ◆ One CAT-5E straight-through cable
- ◆ One CAT-5E crossover cable
- ◆ One RS-232 serial null modem cable
- ◆ One or two rack mount power cables (depending on your order). In addition, you may have one or two power cables specific to your region or country.
- ◆ One rail kit
- ◆ Documentation set CD-ROM specific to your order

If any items are damaged or missing, notify HP technical support at <http://www.hp.com> for replacement or repair.

Preparing Your Site for Installation

The HP EFS WAN Accelerator is completely assembled with all the equipment parts in place and securely fastened.

Before you install the HP EFS WAN Accelerator, make sure your site meets the following requirements:

- ◆ A standard electronic environment where the ambient temperature is between 10° C and 35° C (50° F and 95° F) and the relative humidity is between 10% and 90% (non-condensing). For detailed information, see [Appendix A, “Technical Specifications and Regulatory Information.”](#)
- ◆ Ethernet connections available within the standard Ethernet limit.
- ◆ Space on a two or four post 19-inch rack.
- ◆ A clean power source dedicated to computer devices and other electronic equipment.

Required Tools and Equipment

You need the following tools and equipment to mount the HP EFS WAN Accelerator to a rack:

- ◆ A standard 19 inch Telco-type mounting rack. The HP ProLiant DL380-3010 and DL380-5010 require 2 Units (U) of rack space. The HP ProLiant DL320-510, DL320-1010, and DL320-2010 require 1 U of rack space.

- ◆ Appropriate screwdriver for screws if mounting into a threaded-hole rack. Refer to the instructions that came with the rack mount kit. Also refer to the documentation that came with your system for important rack planning resource instructions.

NOTE: If mounting to a two-post rack, go to <http://www.racksolutions.com/hp>.

Required Configuration Information

Before you begin the installation and configuration process gather the necessary configuration information:

- ◆ Host name for the HP EFS WAN Accelerator
- ◆ Internet Protocol (IP) address for the HP EFS WAN Accelerator
- ◆ Netmask
- ◆ Default gateway (the WAN gateway)
- ◆ Domain Name Service (DNS) IP address
- ◆ Domain name for the system
- ◆ For in-path configurations: in-path interface IP address, in-path netmask, and in-path default gateway.
- ◆ For in-path configurations, check the speed and duplex settings on the Local Area Network (LAN) switch and WAN router that the HP EFS WAN Accelerator will connect to. The settings for the HP EFS WAN Accelerator and the LAN and WAN devices must match. If these settings do not match, optimization is degraded.

NOTE: The HP EFS WAN Accelerator automatically negotiates duplex settings. If one end of the link is set to auto-negotiate and the other end of the link is not set to auto-negotiate, the duplex settings default to half-duplex. This duplex mismatch passes traffic, but it causes late collisions and results in degraded optimization. To achieve maximum optimization set the devices to 100 or full.

- ◆ Determine if there are any ports in your network that are restricted. The HP EFS WAN Accelerator automatically forwards traffic on interactive (for example, Telnet and shell) and secure ports (for example, **ssh** and **smtps**). For a complete list of ports automatically forwarded, see [Appendix B, "HP EFS WAN Accelerator Ports."](#)

Mounting the HP EFS WAN Accelerator to a Rack

Refer to the instructions that came with your rack kit.

HP ProLiant DL320-510, DL320-1010, and DL320-2010 Hardware

Figure 2-1. HP ProLiant DL320-510, DL320-1010, and DL320-2010 Hardware: Rear Panel

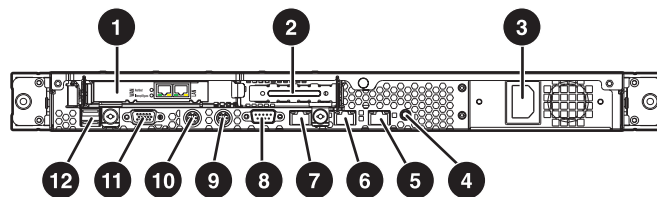


Table 0-1. HP ProLiant DL320-510, DL320-1010, DL320-2010 Hardware Explanation

Item	Description
1	Adlink Gigabit Ethernet Card with fail-through interface
2	PCI-X expansion slot 1, low-profile half-length 64 bit/100 MHz 3.3 V
3	Power supply
4	UID button/LED
5	10/100/1000 NIC 1
6	10/100/1000 NIC 2
7	iLO management port
8	Serial connector
9	Mouse connector
10	Keyboard connector
11	Video connector
12	USB connectors

Figure 2-2. HP ProLiant DL320-510, DL320-1010, and DL320-2010: Front Panel LEDs and Buttons

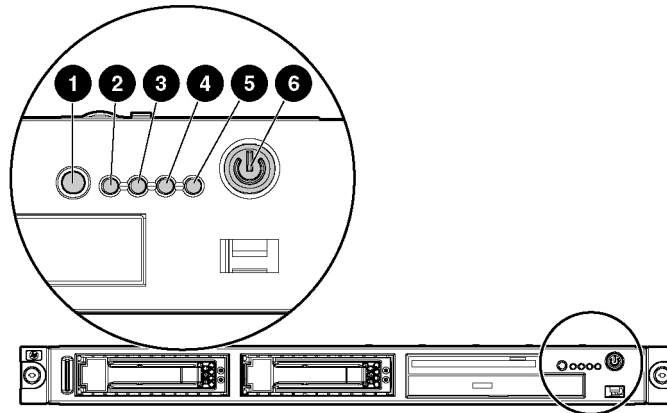


Table 0-2. HP ProLiant DL320-510, DL320-1010, and DL320-2010: Front Panel LEDs and Buttons Explanation

Item	Description	Status
1	UID button/LED	Blue = Identification is activated. Flashing blue = System is being remotely managed. Off = Identification is
2	Internal health LED	Green = System health is normal. Amber = System is degraded. To identify the component in a degraded state, refer to system board LEDs (on page 14). Red = System critical. To identify the component in a critical state, refer to system board LEDs (on page 14). Off = System health is normal (when in standby mode).
3	NIC 1 link/activity LED	Green = Network link exists. Flashing green = Network link and activity exist. Off = No link to network exists.
4	NIC 2 link/activity LED	Green = Network link exists. Flashing green = Network link and activity exist. Off = No link to network exists.
5	Drive activity LED	Green = Drive activity is normal. Amber = Drive failure occurred. Off = No drive activity.

Item	Description	Status
6	Power On/Standby button and system power LED	<p>Green = System is on.</p> <p>Amber = System is shut down, but power is still applied.</p> <p>Off = Power cord is not attached, power supply failure has occurred, no power supplies are installed, facility power is not available, or the DC-to-DC converter is not installed.</p>

HP ProLiant DL380-3010 and DL380-5010 Hardware

Figure 2-3. HP ProLiant DL380-3010 and DL380-5010 Hardware

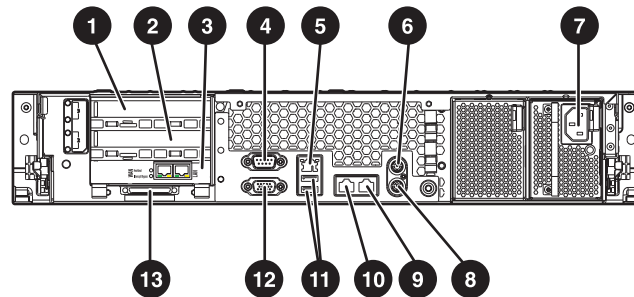


Table 0-3. HP ProLiant DL380-3010 and DL380-5010 Hardware Explanation

Item	Description
1	<ul style="list-style-type: none"> • PCI-X expansion slot 3, 64-bit/100 MHz, Bus B • Hot-pluggable PCI-X expansion slot 3, 64-bit/100 MHz, Bus B • PCI Express x4 slot 2, Bus B*
2	<ul style="list-style-type: none"> • PCI-X expansion slot 2, 64-bit/100 MHz, Bus B • Hot-pluggable PCI-X expansion slot 2, 64-bit/100 MHz, Bus B • PCI Express x4 slot 1, Bus A*
3	Adlink Gigabit Ethernet Card with fail-through interface
4	Serial connector
5	iLO management port
6	Mouse connector
7	Power cord connector
8	Keyboard connector
9	NIC 1 connector
10	NIC 2 connector

Item	Description
11	USB connectors
12	Video connector
13	VHDCI SCSI connector (port 1)

* x8 PCI Express cards are supported and will run at x4 speeds.

Figure 2-4. HP ProLiant DL380-3010 and DL380-5010 Front Panel LEDs and Buttons

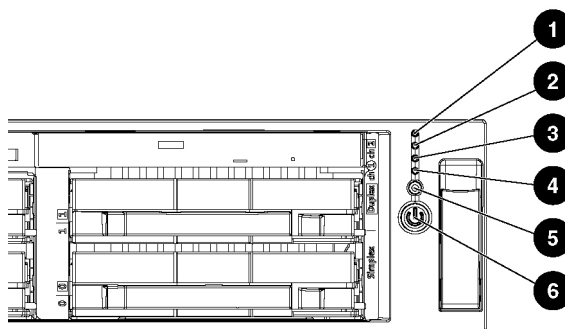


Table 0-4. HP ProLiant DL380-3010 and DL380-5010: Front Panel LEDs and Buttons Explanation

Item	Description	Status
1	Internal health LED	Green = Normal Amber = System degraded. Refer to system board LEDs to identify component in degraded state. Red = System critical. Refer to system board LEDs to identify component in critical
2	External health LED (power)	Green = Normal Amber = Power redundancy failure Red = Critical power supply failure 3
3	NIC 1 link/activity LED	Green = Network link Flashing = Network link and activity Off = No link to network. If power is off, view the rear panel RJ-45 LEDs for status
4	NIC 2 link/activity LED	Green = Network link Flashing = Network link and activity Off = No link to network. If power is off, view the rear panel RJ-45 LEDs for status.

Item	Description	Status
5	UID LED button	Blue = Activated Flashing = System being remotely managed Off = Deactivated
6	Power On/Standby button/system power LED	Green = System on Amber = System shut down, but power still applied Off = Power cord not attached or power supply failure

NIC Port Labeling Terminology Note

Labeling for the NIC ports varies on the Riverbed Technology, Inc. Steelhead appliance and the HP ProLiant DL320 and DL380 servers. To avoid confusion, the table below outlines the different labels for the NIC ports.

Product	Label 1	Label 2
Riverbed Technology, Inc. Steelhead appliance	Primary	AUX
HP ProLiant DL320-510, DL320-1010, and DL320-2010	NIC1	NIC2
HP ProLiant DL380-3010 and DL380-5010	1	2

Powering On the HP EFS WAN Accelerator

The following section describes how to connect the Alternating Current (AC) power and how to power on the HP EFS WAN Accelerator.

To power on the HP ProLiant DL320-510, DL320-1010, and DL320-2010

1. Plug the AC power cord into the HP EFS WAN Accelerator ([Figure 2-1 on page 21](#), item 3).
2. Plug the AC power cord into an uninterrupted AC power source .
3. Press the Power On/Standby button on the front of the HP EFS WAN Accelerator ([Figure 2-2 on page 22](#), item 6).
4. Check the status lights on the front and rear of the HP EFS WAN Accelerator.

To power on the HP ProLiant DL380-3010 and DL380-5010

1. Plug the AC power cords into the HP EFS WAN Accelerator ([Figure 2-3 on page 23](#), item 7).
2. Plug the AC power cords into an uninterrupted AC power source.
3. Press the Power On/Standby button on the front of the HP EFS WAN Accelerator ([Figure 2-4 on page 24](#), item 6).
4. Check the status lights on the front and rear of the HP EFS WAN Accelerator.

NOTE: The disk drives take about 2-5 minutes to boot.

HP System Management Homepage v2.0

The HP System Management Homepage v2.0 is a web-based interface that consolidates and simplifies the management of HP ProLiant servers. It provides a secure and intuitive interface to review in-depth hardware configuration and status data, performance metrics, system thresholds and software version control information. Go to the [HP System Management Homepage v2.0](#) for more information.

Integrated Lights-Out

The Integrated Lights-Out (iLO) feature allows remote server management. Refer to the Integrated Lights-Out User Guide that came with the documentation set CD-ROM for your product.

Connecting to the HP EFS WAN Accelerator

To access the configuration wizard and the HP EFS WAN Accelerator command-line interface (CLI), you establish a serial connection using a terminal emulator program.

To connect to the HP StorageWorks Enterprise File Services WAN Accelerator

1. Plug the serial cable into the Console port on the HP EFS WAN Accelerator.
 - ◆ For the HP ProLiant DL320-510, DL320-1010, and DL320-2010, refer to [Figure 2-1 on page 21](#), item 8.

- ◆ For the HP ProLiant DL380-3010 and DL380-5010, refer to [Figure 2-3 on page 23](#), item 4.

TIP: You can also connect to the HP EFS WAN Accelerator using a crossover cable. Plug a crossover cable into the NIC1 (Primary) port of the HP EFS WAN Accelerator and your laptop computer. If you use this method, you will be disconnected after changing the primary default IP address (**169.254.169.254**) in the configuration wizard. You must reconnect using the new IP address that you entered and restart the configuration wizard using the **configuration jump-start** command in the CLI.

2. Start your terminal emulation program. The terminal device must have the following settings:

- ◆ Baud rate: 9600 bps
- ◆ Data bits: 8
- ◆ Parity: none
- ◆ Stop bits: 1
- ◆ No flow control

NOTE: If you are using the HP EFS WAN Accelerator with a terminal server, the terminal server must use hardware flow control for the port connected to the HP EFS WAN Accelerator.

3. Log in as administrator user (admin) and enter the default password (password). For example:

```
login as: admin
Sent username "admin"
password: password
```

4. Check the system and disk drive status lights.

- ◆ For the HP ProLiant, refer to DL320-510, DL320-1010, and DL320-2010, refer to [Figure 2-2 on page 22](#).
- ◆ For the HP ProLiant DL380-3010 and DL380-5010, refer to [Figure 2-4 on page 24](#).

The HP EFS WAN Accelerator is equipped with the following fail-through cards:

Figure 2-5. Adlink Gigabit-Ethernet (Gig-E) Fail-Through Card



The following table describes the Adlink Gig-E Status Lights

Status Lights	Signal	Description
Intercept/ Bypass	SOLID	Normal State
	OFF	Bypass or Power Off
Heartbeat	ON	Watchdog Time Out
	FLASHING	Watchdog Running
	OFF	Watchdog Disabled

The following table describes the Adlink Gig-E card Light-Emitting Diode (LED) lights.

Status		Left LED (Yellow)	Right LED (Green)
Network Link Not Established		OFF	OFF
10 Mbps (10 Base T)	Link	OFF	SOLID (GREEN)
	Active	OFF	FLASHING (GREEN)
100 Mbps (100 Base T)	Link	SOLID (YELLOW)	OFF
	Active	FLASHING (YELLOW)	OFF
1000 Mbps (1000 Base T)	Link	SOLID (YELLOW)	SOLID (GREEN)
	Active	FLASHING (YELLOW)	FLASHING (GREEN)

After you have established connection, you configure the HP EFS WAN Accelerator using the configuration wizard:

- ◆ For in-path configurations, see [“Configuring In-Path HP EFS WAN Accelerators,”](#) next
- ◆ For out-of-path configurations, see [“Configuring Out-of-Path HP EFS WAN Accelerators”](#) on page 35.


Configuring In-Path HP EFS WAN Accelerators

In an in-path configuration the HP EFS WAN Accelerator is in the direct path between the client and the server. Perform the following procedures on the client-side and server-side HP EFS WAN Accelerators.

Configuring Your Speed and Duplex Settings

Before you begin the configuration process, check the settings on router and switch that your HP EFS WAN Accelerator will be connected to. Make sure the settings on the device and the appliance match (preferably, 100 Mbps or full for proper operation). If the settings do not match, optimization might be degraded.

Figure 2-6. In-Path Configuration

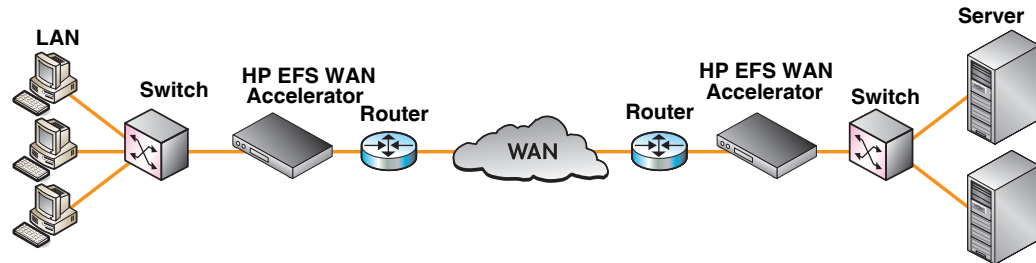

To configure the HP StorageWorks Enterprise File Services WAN Accelerator

1. To start the configuration wizard, enter yes at the system prompt. For example:

Configuration wizard.

Do you want to use the wizard for initial configuration? yes

TIP: Press ENTER to enter the default value. Press '?' for help. Press CTRL B to go back to the previous step. If you mistakenly answer no, you can restart the configuration wizard by entering **configuration jump-start** at the system prompt.

2. To configure the host name for the HP EFS WAN Accelerator, enter the host name at the system prompt. For example:

Step 1: Hostname? minna

3. You are given the option to enable the Dynamic Host Configuration Protocol (DHCP) to automatically assign an IP address to the primary interface (that is, the HP EFS WAN Accelerator). HP recommends you do not set DHCP. The default value is no. For example:

Step 2: Use DHCP? no

4. To configure the primary interface for the HP EFS WAN Accelerator, enter the IP address you want to assign to the appliance at the system prompt. For example:

Step 3: Primary IP address? 10.0.0.74

5. To configure the netmask, enter the netmask address at the system prompt. For example:

Step 4: Netmask? 255.255.0.0

6. To configure the default gateway for the HP EFS WAN Accelerator, enter the IP address at the system prompt. For example:

Step 5: Default gateway? 10.0.0.1

This value sets the default gateway to your network for optimization, logging, Simple Network Management Protocol (SNMP) traps, and Management Console access.

7. To configure the primary Domain Name Service (DNS), enter the IP address of the DNS server at the system prompt. For example:

Step 6: Primary DNS server? 10.0.0.2

8. To configure the domain name for the system, enter the domain name at the system prompt. For example:

Step 7: Domain name? mydomain.com

If you configure a domain name, you can enter host names in the system without the domain name.

9. To assign a new password to the administrator user (admin), type a password at the system prompt. For example:

Step 8: Admin password? xxxyyy

HP strongly recommends that you change the default password at this time. The password must be minimum of 6 characters. The default administrator password is password.

10. If you have already configured another HP EFS WAN Accelerator, you are given the option to copy your configuration settings to this appliance. To copy configuration settings, type yes at the system prompt. If you do not need to copy a configuration, type no at the system prompt. For example:

Step 9: Copy config from another site? no

11. To set the speed on the primary interface (that is, the HP EFS WAN Accelerator), type a value at the system prompt. Make sure the value matches the settings on your router or switch. The default value is auto. For example:

Step 10: Set the primary interface speed? [auto] 100

12. To set the duplex mode on the primary interface, type a value at the system prompt. Make sure the value matches the settings on your router or switch. The default value is auto. For example:

Step 11: Set the primary interface duplex? [auto] full

13. To configure in-path support, enter yes at the system prompt. An in-path configuration is a configuration in which the HP EFS WAN Accelerator is in the direct path of the client and server. For example:

Step 12: Would you like to activate the in path configuration? yes

For detailed information about in-path configurations and why you would use them, see [“In-Path Deployments” on page 46](#).

14. Enter the in-path IP address for the HP EFS WAN Accelerator at the system prompt. For example:

Step 13: In Path IP address? 10.0.0.100

15. Enter the in-path netmask address at the system prompt. For example:

Step 14: In Path Netmask? 255.255.255.0

16. Enter the in-path default gateway (the WAN gateway) at the system prompt. For example:

Step 15: In-Path Default Gateway? 10.0.0.4

17. To set the in-path, local area network (LAN) interface speed, type a value at the system prompt. Make sure the value matches the settings on your router or switch. The default value is **auto**. For example:

Step 16: Set the in-path:LAN interface speed? [auto] 100

18. To set the in-path, LAN duplex speed, type a value at the system prompt. Make sure the value matches the settings on your router or switch. The default value is **auto**. For example:

Step 17: Set the in-path:LAN interface duplex? [auto] full

19. To set the in-path, WAN interface speed, type a value at the system prompt. Make sure the value matches the settings on your router or switch. The default value is **auto**. For example:

Step 18: Set the in-path:WAN interface speed? [auto] 100

20. To set the in-path, WAN duplex speed, type a value at the system prompt. Make sure your setting matches the setting on your router or switch. The default value is **auto**. For example:

Step 19: Set the in-path:WAN interface duplex? [auto] full

21. The system confirms your settings.

You have entered the following information:

1. Hostname: minna
2. Use DHCP: no
3. Primary IP address: 10.0.0.74
4. Netmask: 255.255.0.0
5. Default gateway: 10.0.0.1
6. Primary DNS server: 10.0.0.2
7. Domain name: mydomain.com
8. Admin password: (unchanged)
9. Copy config from another site: no
10. Set the primary interface speed: 100
11. Set the primary interface duplex: full
12. Would you like to activate the in-path configuration: no
13. In-Path IP address: 10.0.0.100
14. In-Path Netmask: 255.255.0.0
15. In-Path Default gateway: 10.0.0.4
16. Set the in-path:LAN interface speed: 100
17. Set the in-path:LAN interface duplex: full
18. Set the in-path:WAN interface speed: 100
19. Set the in-path:WAN interface duplex: full

To change an answer, enter the step number to return to.
Otherwise hit <enter> to save changes and exit.

Choice:

The HP EFS WAN Accelerator configuration wizard automatically saves your configuration settings.

22. To log out of the system, enter the following command at the system prompt:

```
# exit
```

Connecting the HP EFS WAN Accelerator to Your Network

To connect the HP EFS WAN Accelerator to your network

You use CAT-5E straight-through and crossover cables to connect to your network in an in-path configuration. Make sure you use the correct cables to establish your network connections:

- ◆ **Straight-through cables.** Use straight-through cables to connect the NIC1 (Primary) and LAN ports on the HP EFS WAN Accelerator to the LAN switch
- ◆ **Crossover cable.** Use the crossover cable to connect the WAN port on the HP EFS WAN Accelerator to the WAN router

1. Plug the straight-through cable into the NIC1 (Primary) port of the HP EFS WAN Accelerator and the LAN switch. (This can be any port on your LAN switch that acts as a host.)
 - ◆ For the HP ProLiant DL320-510, DL320-1010, and DL320-2010, refer to [Figure 2-1 on page 21](#), item 5.
 - ◆ For the HP ProLiant DL380-3010 and DL380-5010, refer to [Figure 2-3 on page 23](#), item 9.
2. Unplug the WAN router cable that connects to your LAN switch.

Figure 2-7. Disconnecting the WAN Router



3. Plug the cable you unplugged into the WAN port of the HP StorageWorks Enterprise File Services WAN Accelerator and the WAN router. (This must be a crossover cable.)
 - ◆ For the HP ProLiant DL320-510, DL320-1010, and DL320-2010, refer to [Figure 2-1 on page 21](#), item 1. For a detailed view, refer to [Figure 2-5 on page 27](#).
 - ◆ For the HP ProLiant DL380-3010 and DL380-5010, refer to [Figure 2-3 on page 23](#), item 3. For a detailed view, refer to [Figure 2-5 on page 27](#).
4. Plug the straight-through cable into the LAN port of the HP EFS WAN Accelerator and the LAN switch.
 - ◆ For the HP ProLiant DL320-510, DL320-1010, and DL320-2010, refer to [Figure 2-1 on page 21](#), item 1. For a detailed view, refer to [Figure 2-5 on page 27](#).
 - ◆ For the HP ProLiant DL380-3010 and DL380-5010, refer to [Figure 2-3 on page 23](#), item 3. For a detailed view, refer to [Figure 2-5 on page 27](#).

You can now optimize WAN traffic using the HP EFS WAN Accelerator.

Verifying Your Connections

To verify your connections

Perform the following tasks to verify that you have properly connected the HP EFS WAN Accelerator.

1. Verify that you can connect to the HP EFS WAN Accelerator CLI using one of the following devices:
 - ◆ An ASCII terminal or emulator that can connect to the serial console. It must have the following settings: 9600 baud, 8 bits, no parity, 1 stop bit, and no flow control.
 - ◆ A computer with a Secure Shell (**ssh**) client that is connected to the HP EFS WAN Accelerator NIC1 (Primary) port.

2. At the system prompt, enter the following command:

```
ssh admin@host.domain
```

or

```
ssh admin@ipaddress
```

3. You are prompted for the administrator password. This is the password you set in the configuration wizard.

4. At the system prompt, **ping** from the management interface.

```
ping -I <primary-IP-address> <primary-default-gateway>
```

5. At the system prompt, **ping** from the in-path default gateway.

```
ping -I <in-path-IP-address> <in-path-default-gateway>
```

Connecting to the Management Console

After you configure the HP EFS WAN Accelerator, you can check and modify your configuration settings, and view performance reports and system logs in the Management Console. You can connect to the Management Console through any supported Web browser.

To connect to the Management Console you must know the host, domain, and administrator password that you assigned during the initial setup of the HP EFS WAN Accelerator.

NOTE: Cookies and Javascript must be enabled in your Web browser.

To connect to the Management Console

1. Enter the URL for the Management Console in the location box of your Web browser:

protocol://host.domain

protocol is **http** or **https**. HyperText Transport Protocol Secure (HTTPS) uses the Secure Sockets Layer (SSL) protocol to ensure a secure environment. If you use HTTPS to connect you are prompted to inspect and verify the SSL key.


host is the host name you assigned to the HP EFS WAN Accelerator during initial configuration. If your DNS server maps that IP address to a name, you can specify the DNS name.

domain is the full domain name for the HP EFS WAN Accelerator.

NOTE: Alternatively, you can specify the IP address instead of the host and domain. For example: **http://169.254.169.254/**.

The Management Console appears, displaying the Welcome page.

Figure 2-8. Welcome Page

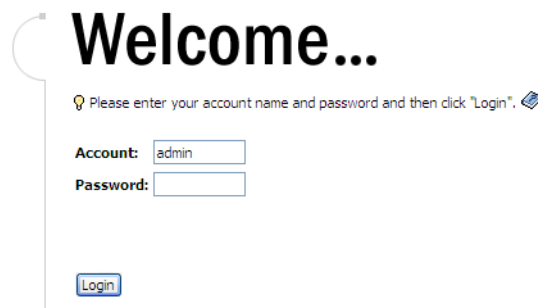

2. In the **Account** text box, type the user login: **admin**, **monitor**, a login from a Remote Authentication Dial-In User Service (RADIUS), or a Terminal Access Controller Access Control System (TACACS+) database. The default login is **admin**.

Users with administrator (**admin**) privileges can configure and administer the HP EFS WAN Accelerator. Users with monitor (**monitor**) privileges can view connected HP EFS WAN Accelerators and reports.

3. In the **Password** text box, type the password you assigned in the configuration wizard.
4. Click **Login** to display the Home: Welcome page. The Home: Welcome page summarizes the current performance of your system and provides links to system logs and HP technical support.

Verifying Your Configuration

Perform the following tasks to verify that you have properly configured the HP EFS WAN Accelerator.

To verify your speed and duplex settings

If you selected auto-negotiation (`auto`) for your in-path and primary interfaces, you must make sure that the HP EFS WAN Accelerator negotiated the speed and duplex at the rate that your devices expect (for example, `100` and `full` for proper operation to occur). You can verify your speed and duplex settings in the Management Console Reports.

1. In the Management Console, click **Logging** to display the Logging: View System Logs page.
2. Check for duplex and speed errors in the system logs (for example, `crc` and `frame` errors).
3. Click **Reports** to display the Reports: Bandwidth Optimization page.
4. In the left menu, click **Network Interfaces** to display the Reports: Network Interfaces Statistics page.
5. Check the speed and duplex settings on your LAN and WAN interface. To modify your settings, go to the Setup: Networking, Names & Interfaces page.

To verify optimization in an in-path configuration

1. Mount a drive on the client machine.
2. Drag and drop a 1 MB file.
3. Drag and drop the 1 MB file again. Performance improves significantly.


Configuring Out-of-Path HP EFS WAN Accelerators

In an out-of-path configuration, the client-side HP EFS WAN Accelerator is configured as an in-path interface and the server-side, HP EFS WAN Accelerator is configured as an out-of-path interface.

Configuring Your Speed and Duplex Settings

Before you begin the configuration process, check the settings on router and switch that your HP EFS WAN Accelerator will be connected to. Make sure the settings on the device and the HP EFS WAN Accelerator match (preferably, `100 Mbps` or `full` for proper operation). If the settings do not match, optimization might be degraded.

Figure 2-9. Out-of-Path Configuration

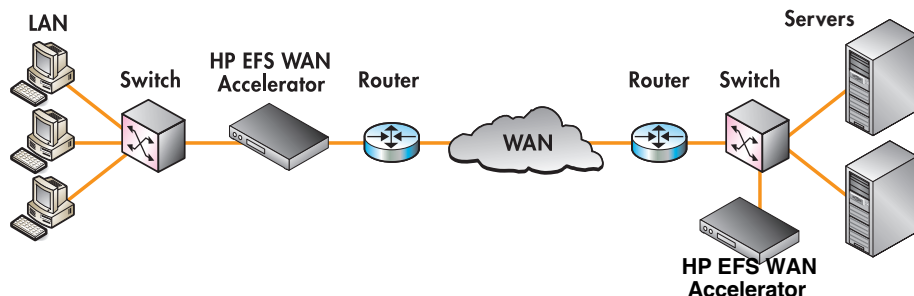

Configuring the Server-Side Appliance

To configure the server-side HP EFS WAN Accelerator

You use the configuration wizard to configure an out-of-path HP EFS WAN Accelerator.

1. To start the configuration wizard, enter `yes` at the system prompt. For example:

```
Configuration wizard.
```

```
Do you want to use the wizard for initial configuration? yes
```

TIP: Press `ENTER` to enter the default value. Press `'?'` for help. Press `CTRL B` to go back to the previous step. If you mistakenly answer `no`, you can start the configuration wizard by entering **configuration jump-start** at the system prompt.

2. To configure the host name for the HP EFS WAN Accelerator, enter the host name at the system prompt. For example:

```
Step 1: Hostname? minna
```

3. You are given the option to enable the Dynamic Host Configuration Protocol (DHCP) to automatically assign an IP address to the primary interface (that is, the HP EFS WAN Accelerator). HP recommends you do not set DHCP. The default value is `no`. For example:

```
Step 2: Use DHCP? no
```

4. To configure the primary interface for the HP EFS WAN Accelerator, enter the IP address you want to assign to the appliance at the system prompt. For example:

```
Step 3: Primary IP address? 10.0.0.74
```

5. To configure the netmask, enter the netmask address at the system prompt. For example:

```
Step 4: Netmask? 255.255.0.0
```

6. To configure the default gateway for the HP EFS WAN Accelerator, enter the IP address at the system prompt. For example:

```
Step 5: Default gateway? 10.0.0.1
```

This value sets the default gateway to your network for optimization, logging, Simple Network Management Protocol (SNMP) traps, and Management Console access.

7. To configure the primary Domain Name Service (DNS), enter the IP address of the DNS server at the system prompt. For example:

```
Step 6: Primary DNS server? 10.0.0.2
```

8. To configure the domain name for the system, enter the domain name at the system prompt. For example:

Step 7: Domain name? mydomain.com

If you configure a domain name, you can enter host names in the system without the domain name.

9. To assign a new password to the administrator user (admin), type a password at the system prompt. For example:

Step 8: Admin password? xxxyyy

HP strongly recommends that you change the default password at this time. The password must be minimum of 6 characters. The default administrator password is password.

10. If you have already configured another HP EFS WAN Accelerator, you are given the option to copy your configuration settings to this appliance. To copy configuration settings, type yes at the system prompt. If you do not need to copy a configuration, type no at the system prompt. For example:

Step 9: Copy config from another site? no

11. To set the speed on the primary interface (that is, the HP EFS WAN Accelerator), type a value at the system prompt. Make sure the value matches the settings on your router or switch. The default value is auto. For example:

Step 10: Set the primary interface speed? 100

12. To set the duplex mode on the primary interface, type a value at the system prompt. Make sure the value matches the settings on your router or switch. The default value is auto. For example:

Step 11: Set the primary interface duplex? [auto] full

13. You are given the option to activate in-path support. Type no at the system prompt. For example:

Step 12: Would you like to activate the in path configuration? no

14. To activate an out-of-path configuration, type yes at the system prompt. For example:

Step 13: Would you like to activate the out-of-path configuration? [no]
yes

The system confirms your settings.

You have entered the following information:

1. Hostname: minna
2. Use DHCP: no
3. Primary IP address: 10.0.0.74
4. Netmask: 255.255.0.0
5. Default gateway: 10.0.0.1
6. Primary DNS server: 10.0.0.2
7. Domain name: mydomain.com
8. Admin password: (unchanged)
9. Copy config from another site: no
10. Set the primary interface speed: 100
11. Set the primary interface duplex: full
12. Would you like to activate the in-path configuration: no
- 13: Would you like to activate the out-of-path configuration? yes

To change an answer, enter the step number to return to.
Otherwise hit <enter> to save changes and exit.

Choice:

The HP EFS WAN Accelerator configuration wizard automatically saves your configuration settings.

15. To log out of the system, enter the following command at the system prompt:

```
# exit
```

Connecting the HP EFS WAN Accelerator to Your Network

To connect the HP EFS WAN Accelerator to your network

You use a CAT-5E straight-through cable to connect the NIC1 (Primary) port of the HP EFS WAN Accelerator to the LAN switch in an out-of-path configuration.

Plug the straight-through cable into the NIC1 (Primary) port of the HP EFS WAN Accelerator and the LAN switch. (This can be any port on your LAN switch that acts as a host.)

- ◆ For the HP ProLiant DL320-510, DL320-1010, and DL320-2010, refer to [Figure 2-1 on page 21](#), item 5.
- ◆ For the HP ProLiant DL380-3010 and DL380-5010, refer to [Figure 2-3 on page 23](#), item 9.

Configuring the Client-Side HP EFS WAN Accelerator

To configure the client-side HP StorageWorks Enterprise File Services WAN Accelerator

In an out-of-path configuration, you configure the client-side, HP EFS WAN Accelerator in the same way as an in-path configuration. For optimization to occur, you must define a fixed-target rule on the client-side HP EFS WAN Accelerator that points to the out-of-path, server-side HP EFS WAN Accelerator. You can define fixed-target rules using the Management Console or the HP EFS WAN Accelerator command-line interface.

For detailed information about the Management Console, see the *HP EFS WAN Accelerator Management Console User's Guide*.

1. Follow the procedures for an in-path configuration. For details, see [“Configuring In-Path HP EFS WAN Accelerators” on page 28](#).
2. Connect to the Management Console. For details, see [“Connecting to the Management Console” on page 33](#).
3. Navigate to the Setup: Service, In Path Rules, Fixed Target page.

Figure 2-10. Setup: Service, In Path Rules, Fixed Target Page

Home Setup Reports Logging Help

Logged in as: admin (logout)

Setup

- Networking
- Service «
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts
- Configuration Manager
- Upgrade Software
- Update License
- Start/Stop Service
- Reboot Appliance
- Shutdown Appliance

Service

Configuration In-Path Rules QoS WCCP Service Groups Asymmetric Routing

Check and modify your in-path rules. By default, all traffic going through this appliance is optimized.

#	Action	Source	Destination	Port	VLAN ID	Target	Port
def	Auto Discover	all	all	all	all	--	--

Remove Selected Rules

Add New Rule: Auto Discover Fixed Target Pass Through

Fixed target rules directly specify out-of-path appliances near the target server.

Insert Rule Before: end

Source Subnet: 0.0.0.0 Netmask: 0.0.0.0

Destination Subnet: 0.0.0.0 Netmask: 0.0.0.0 Port: all

Target IP Address: 10.0.0.73 Port: 7810

Backup Target IP Address: Port: 7810

VLAN Tag ID: All

Add Rule

Additional Options:

- ☒ Automatically Pass Through Traffic for Known Secure Ports
- ☒ Automatically Pass Through Traffic for Known Interactive Ports

Apply

Save Reset

4. Type the out-of-path, server-side, HP EFS WAN Accelerator IP address and port in the **Target IP Address** and **Port** text boxes.
5. Click **Save** to write your settings to memory or click **Reset** to return the settings to their previous values.

You can check and modify your configuration settings in the Management Console. For detailed information, see the *HP EFS WAN Accelerator Management Console User's Guide*.

For detailed information about verifying your connections and configuration settings, see [“Verifying Your Connections” on page 33](#) and [“Verifying Your Configuration” on page 34](#).

You can now optimize WAN traffic using the HP EFS WAN Accelerator.

SMB Signing and Windows Performance

The Common Internet File System (CIFS) protocol, used by Windows operating systems for file and print sharing, is based on the Server Message Block (SMB) protocol. To prevent security assaults that might modify transmissions, the SMB protocol supports signing all transmitted SMB packets. By default, Domain Controllers that also act as file servers have signing enabled.

SMB signing prevents the HP EFS WAN Accelerator from applying full optimization on CIFS connections and significantly reduces the performance gain of an HP EFS WAN Accelerator deployment. As many customers take additional security precautions (such as firewalls, internal-only reachable servers, and so forth), the SMB signing adds little additional security, at a significant performance cost (even without HP EFS WAN Accelerators).

SMB signing is a performance intensive operation for clients and servers. Hence this feature is not turned on all the time. This feature is negotiated between the client and the server.

NOTE: For detailed information about the performance impact of SMB signing, see the Microsoft support site at: <http://www.microsoft.com/technet/treeview/default.asp?url=/technet/prodtechnol/windowsserver2003/proddocs/datacenter/570.asp>. SMB signing was enabled on Windows 2000, Service Pack 3, Critical fix Q329170.

You can disable SMB signing using one of the following approaches:

- ◆ [“Disabling SMB Signing Using Active Directory,”](#) next
- ◆ [“Enabling the Secure-CIFS Feature” on page 43](#)

Disabling SMB Signing Using Active Directory

To disable SMB signing you must revise the default SMB registry parameters. SMB signing is controlled by the following registry parameters:

```
enablesecuritysignature (SSEn)  
requiresecuritysignature (SSReq)
```

The registry settings are located in:

HKEY_LOCAL_MACHINE\SYSTEM\CurrentControlSet\Services\lanmanserver\parameters

The following table summarizes the default the SMB signing registry parameters.

Machine Role	SSEn	SSReq
Client/Workstation	ON	OFF
Member Server	OFF	OFF
Domain Controller	ON	ON

With these default registry parameters, SMB signing is negotiated in the following manner:

- ◆ SMB/CIFS exchanges between the Client/Workstation and the Member Server are not signed.
- ◆ SMB/CIFS exchanges between the Client/Workstation and the Domain Controller are always signed.

The following table lists the revised SMB registry parameters that ensure full optimization (that is, bandwidth and latency optimization) with the HP EFS WAN Accelerator.

Number	Client/Workstation		Member Server		Results
	SSEn	SSReq	SSEn	SSReq	
1	OFF	OFF	OFF	OFF	Signature Disabled: Full Optimization
2	OFF	OFF	ON	OFF	Signature Disabled: Full Optimization
3	ON	OFF	OFF	OFF	Signature Disabled: Full Optimization

There are two sets of these parameters on each computer: one set for the computer as a server and the other set for the computer as a client.

NOTE: On the client, if SMB signing is set to required, do not disable it on the server.

To disable SMB signing on Windows 2000 domain controllers, member servers, and clients

1. Open Active Directory Users and Computers on the domain controller.
2. Right click Domain Controllers and select **Properties**.
3. Click the Group Policy tab.
4. Click **Default Domain Controllers Policy** and select **Edit**.
5. Click **Default Domain Controllers Policy/Computer Configuration/Windows Settings/Security Settings/Local Policies/Security Options**.
6. Disable **Digitally sign client communication (always)** and **Digitally sign server communication (always)**.
7. Disable **Digitally sign client communication (when possible)** and **Digitally sign server communication (when possible)**.
8. Reboot all the domain controllers and member servers that you want to optimize.

To disable SMB signing on Windows 2003 domain controllers, member servers, and clients

1. Open Active Directory Users and Computers on the domain controller.
2. Right click Domain Controllers and select **Properties**.
3. Click the Group Policy tab.
4. Click **Default Domain Controllers Policy** and select **Edit**.
5. Click **Default Domain Controllers Policy/Computer Configuration/Windows Settings/Security Settings/Local Policies/Security Options**.
6. Disable **Microsoft Network Server: digitally sign communications (always)** and **Microsoft Network Server: digitally sign communications (if client agrees)**.
7. Disable **Microsoft Network Client: digitally sign client communication (always)** and **Microsoft Network client: digitally sign server communications (if server agrees)**.
8. Reboot all the domain controllers and member servers that you want to optimize.

You can verify that SMB signing has been disabled on your domain controllers, member servers, and clients. The following procedures assume that you have installed and configured the HP EFS WAN Accelerators in your network.

To verify that SMB signing has been disabled

1. Copy a couple of files from the server to the client through the HP EFS WAN Accelerators.
2. View the server-side HP EFS WAN Accelerator logs in the Logging: View System Logs page of the Management Console. The following warning messages indicate that the SMB security signatures are still enabled:

Enabling the Secure-CIFS Feature

```
SMB_SHUTDOWN_ERR_SEC_SIG_ENABLED
SMB_SHUTDOWN_ERR_SEC_SIG_REQUIRED
```

3. Repeat [Step 6](#) and [Step 7](#) in “To disable SMB signing on Windows 2000 domain controllers, member servers, and clients” on page 42.

Secure-CIFS enables you to automatically disable SMB signing using an HP EFS WAN Accelerator CLI command.

By default the Secure-CIFS feature is disabled. When a Windows server is set to **SecuritySignatureEnable**, the HP EFS WAN Accelerator stops CIFS optimization but continues performing HP EFS WAN Accelerator optimization.

If you enable Secure-CIFS using the HP EFS WAN Accelerator CLI command **secure-sig-opt**, the HP EFS WAN Accelerator performs CIFS optimization for connections even when the **SecuritySignatureEnable** setting is specified.

IMPORTANT: The HP EFS WAN Accelerator does not optimize traffic if the **SecuritySignatureRequired** setting is specified on the server.

Before you enable Secure-CIFS, you must consider the following factors:

- ◆ If the client-side machine has **Required** signing, enabling secure-CIFS prevents the client from connecting to the server.
- ◆ If the server-side machine has **Required** signing, they connect but you cannot perform full latency optimization with the HP EFS WAN Accelerator. Domain controllers default to **Required**.

You can identify poor CIFS performance by the examining the HP EFS WAN Accelerator log files in the Management Console.

Client-side HP EFS WAN Accelerator:

```
Jan 22 00:01:11 dfcfe1 sport[3940]: [smbcfe.WARN] 728 {10.0.0.14:1605
10.0.0.4:445} Cifs parser shutting down due to
error=SMB_SHUTDOWN_ERR_SEC_SIG_ENABLED. Security signatures are enabled
on the server. Disabling latency optimization, only bandwidth will be
optimized.
```

Server-side HP EFS WAN Accelerator:

```
Jan 22 00:04:49 dfcfe1 sport[3940]: [smbcfe.WARN] 733 {10.0.100.86:4688
10.0.0.4:445} Received cifs shutdown request from SFE:
error=SMB_SHUTDOWN_ERR_SEC_SIG_ENABLED
```

To enable Secure-CIFS

1. Connect to the HP EFS WAN Accelerator CLI. For detailed information, see the *HP EFS WAN Accelerator Command-Line Interface Reference Manual*.
2. Enter configuration mode. At the system prompt enter the following set of commands:

```
minna> enable
minna # configure terminal
```

```
minna (config) #
```

3. At the system prompt, enter the following command:

```
minna (config)# protocol cifs secure-sig-opt enable
```

CHAPTER 3 Advanced Network Deployments

In This Chapter

This chapter provides an overview of advanced network deployments and summarizes the basic steps for configuring them. This chapter includes the following sections:

- ◆ “In-Path Deployments,” next
- ◆ “Out-of-Path Deployments” on page 55
- ◆ “Mixed Deployments” on page 59

This chapter assumes you are familiar with the HP EFS WAN Accelerator Management Console (Management Console). For detailed information about the Management Console and how to use it, see the *HP EFS WAN Accelerator Management Console User's Guide*.


This chapter provides the basic steps for advanced network deployments. It does not provide detailed procedures. Use this chapter as a general guide to these deployments. If you need additional assistance, contact HP Technical Support located at <http://www.hp.com>.

For detailed information about the factors you must consider before you design and deploy the HP EFS WAN Accelerator in a network environment, see “Design and Deployment Overview” on page 17.

In-Path Deployments

The following section describes in-path network configurations where the HP EFS WAN Accelerator is located in the direct path of the client, server, and Wide Area Network (WAN).

Figure 3-1. In-Path, Client and Server-Side Deployment

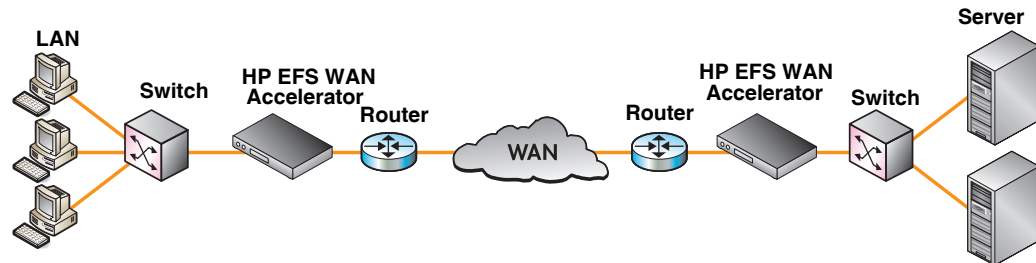


In-Path, Failover Support

An in-path, fail-over support deployment serves offices with one WAN routing point and where failover support is required. This deployment is cost effective, simple to manage, and continues to optimize data if there is an error in the system.

The following figure illustrates the client-side of the network where redundant HP EFS WAN Accelerators are deployed to provide optimization of data.

Figure 3-2. In-Path, Failover Deployment

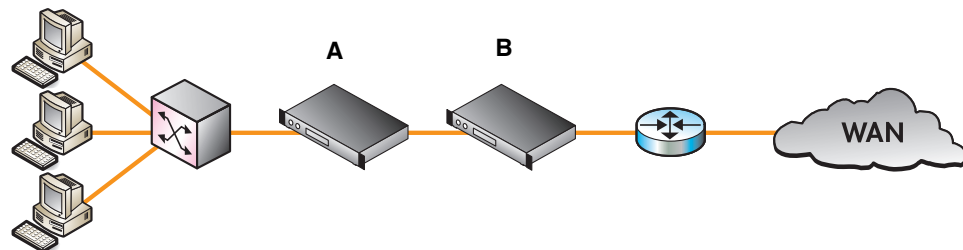

Basic Steps (Client-Side)

Perform the following steps for each client-side HP EFS WAN Accelerator.

1. Configure the HP EFS WAN Accelerator in an in-path configuration. For details see, [“Configuring In-Path HP EFS WAN Accelerators” on page 28](#).
2. Connect to the Management Console. For details see, [“Connecting to the Management Console” on page 33](#).
3. Enable failover support in the Setup: Service, Configuration page of the Management Console. For example:
 - ◆ On HP EFS WAN Accelerator A: specify HP EFS WAN Accelerator A as the *master* and specify the Internet Protocol (IP) address of HP EFS WAN Accelerator B as the *buddy* IP address.

- ◆ On HP EFS WAN Accelerator B: specify HP EFS WAN Accelerator B as the *backup* and specify the IP address of HP EFS WAN Accelerator A as the *buddy* IP address.

Figure 3-3. Management Console Setup: Service, Configuration Page

Home Setup Reports Logging Help Logged in as: admin (logout)

Setup

- Networking
- Service**
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts
- Configuration Manager
- Upgrade Software
- Update License
- Start/Stop Service
- Reboot Appliance
- Shutdown Appliance

Service

Configuration In-Path Rules QoS WCCP Service Groups Asymmetric Routing

Check and modify your base service configuration.

In-Path

☒ Enable In-Path Support

Options:

☐ Enable External Traffic Redirection Support (Layer4/PBR/WCCP)

☐ Reset Existing Client Connections on Start Up

VLAN Tag ID:

Out-of-Path

☐ Enable Out-of-Path Support

Local Port:

Authentication (Optional)

☐ Enable Authentication

Client Secret:

Server Secret:

Failover (Optional - Requires an Additional Appliance)

☒ Enable Failover Support

Mode:

Buddy IP Address:

Apply Save Reset

4. Apply and save the new configuration in the Management Console.
5. Begin optimization. View performance reports and system logs in the Management Console.

Basic Steps (Server-Side)


The server-side HP EFS WAN Accelerator is configured as an in-path device. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators”](#) on page 28.

In-Path, Two Routing Points

An in-path, two routing point deployment serves offices with two WAN routing points and redundant HP EFS WAN Accelerators. This deployment is simple to manage, provides failover support, and load balances traffic. You must configure the Interior Gateway Protocol (IGP) to prefer HP EFS WAN Accelerator links over non-HP EFS WAN Accelerator links for load balancing to occur and to avoid asymmetric routing.

The following figure illustrates the client-side of the network where two in-path HP EFS WAN Accelerators are configured as in-path interfaces.

Figure 3-4. In-Path, Two Routing Points Deployment

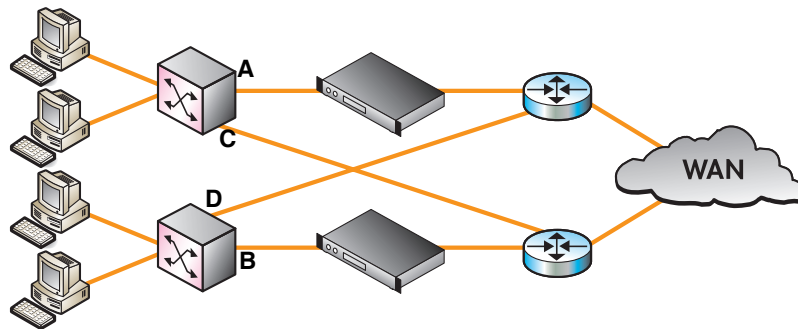

Basic Steps (Client-Side)

Perform the following steps on each client-side HP EFS WAN Accelerator.

1. Configure the HP EFS WAN Accelerator in an in-path configuration. For details see, [“Configuring In-Path HP EFS WAN Accelerators” on page 28.](#)
2. Connect to the Management Console to verify your configuration. For details see, [“Connecting to the Management Console” on page 33.](#)
3. Configure your Interior Gateway Protocol (IGP) to prefer links A and B over links C and D.
4. Begin optimization. View performance reports and system logs in the Management Console.

Basic Steps (Server-Side)

The server-side HP EFS WAN Accelerator is configured as an in-path device. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators” on page 28.](#)


In-Path, Server-Side

An in-path, server-side deployment serves a single server or server subnet. This deployment is simple to manage and LAN traffic is passed-through. It does not provide failover support if there is an error in the system.

This deployment is useful in environments where most of the server-side traffic is out-of-path but there are applications that originate on the server-side that require optimization (for example, backup software, software distribution suites, or other similar applications).

The following figure illustrates a server-side subnet where the HP EFS WAN Accelerator is deployed to provide data center clients with optimized data.

Figure 3-5. In-Path, Server-Side Deployment

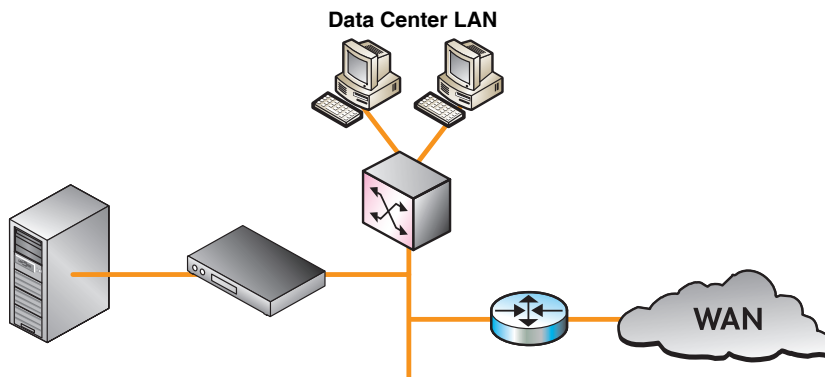

Basic Steps (Client-Side)

The client-side HP EFS WAN Accelerator is configured as an in-path device. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators” on page 28](#).

Basic Steps (Server-Side)

Perform the following steps on the server-side HP EFS WAN Accelerator.

1. Configure the HP EFS WAN Accelerator in an in-path configuration. For details see, [“Configuring In-Path HP EFS WAN Accelerators” on page 28.](#)
2. Define in-path, fixed-target rules for traffic you want to optimize. For detailed information about in-path rules and configuring them, see the *HP EFS WAN Accelerator Management Console User’s Guide*.

Figure 3-6. Management Console Setup: Service, In-Path Rules, Fixed Target Page

The screenshot shows the Management Console interface. The top navigation bar includes Home, Setup, Reports, Logging, and Help. The user is logged in as 'admin'. The left sidebar shows the 'Setup' menu with options like Networking, Service (selected), Protocols, Alarms, Logging, Reports, Date & Time, and Accounts. Below these are sections for Configuration Manager, Upgrade Software, Update License, and Start/Stop Service, Reboot Appliance, Shutdown Appliance.

The main content area is titled 'Service' and has tabs for Configuration, In-Path Rules (selected), QoS, WCCP Service Groups, and Asymmetric Routing. A message states: 'Check and modify your in-path rules. By default, all traffic going through this appliance is optimized.'

#	Action	Source	Destination	Port	VLAN ID	Target	Port
def	Auto Discover	all	all	all	all	--	--

Below the table is a 'Remove Selected Rules' button.

The 'Add New Rule' section has tabs for Auto Discover, Fixed Target (selected), and Pass Through. A message states: 'Fixed target rules directly specify out-of-path appliances near the target server.'

Fields for the Fixed Target rule include:

- Insert Rule Before: end (dropdown)
- Source Subnet: 10.0.0.3 (text box)
- Netmask: 255.255.0.0 (text box)
- Destination Subnet: 10.10.12.1 (text box)
- Netmask: 255.255.0.0 (text box)
- Port: all (text box)
- Target IP Address: (text box)
- Port: 7810 (text box)
- Backup Target IP Address: (text box)
- Port: 7810 (text box)
- VLAN Tag ID: All (dropdown)

There is an 'Add Rule' button at the bottom of this section.

The 'Additional Options' section has two checked checkboxes:

- ☒ Automatically Pass Through Traffic for Known Secure Ports
- ☒ Automatically Pass Through Traffic for Known Interactive Ports

There is an 'Apply' button next to these options.

At the bottom right of the page are 'Save' and 'Reset' buttons.


3. Connect to the Management Console to verify your configuration. For details see, [“Connecting to the Management Console” on page 33.](#)
4. Begin optimization. View performance reports and system logs in the Management Console.

In-Path, Server-Side, 1:1

An in-path, server-side, 1:1 deployment is appropriate for data center LANs where you want to optimize applications on a single server or server subnet. This deployment is simple to manage and LAN traffic is passed-through. It accelerates one server with 100 Mbps of WAN traffic.

The following figure illustrates the server-side of the network.

Figure 3-7. In-Path, Server-Side, 1:1 Deployment

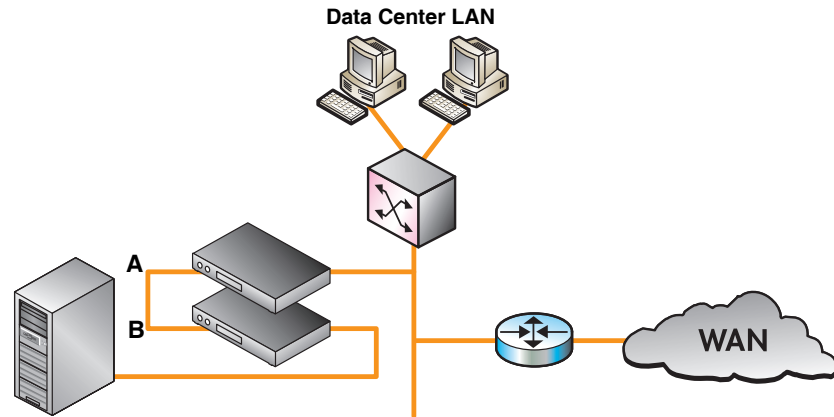

Basic Steps (Client-Side)

The client-side HP EFS WAN Accelerator is configured as an in-path device. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators” on page 28](#).

Basic Steps (Server-Side)

Perform the following steps for each of the server-side HP EFS WAN Accelerators.

1. Configure the HP EFS WAN Accelerator in an in-path configuration. For details see, [“Configuring In-Path HP EFS WAN Accelerators” on page 28](#).
2. Connect to the Management Console to verify your configuration. For details see, [“Connecting to the Management Console” on page 33](#).
3. Enable failover support in the Setup: Service, Configuration page of the Management Console. For example:
 - ◆ On HP EFS WAN Accelerator A: specify HP EFS WAN Accelerator A as the *master* and specify the IP address of HP EFS WAN Accelerator B as the *buddy* IP address.

- ◆ On HP EFS WAN Accelerator B: specify HP EFS WAN Accelerator B as the *backup* and specify the IP address of HP EFS WAN Accelerator A as the *buddy* IP address.

Figure 3-8. Management Console Setup: Service, Configuration Page

Home Setup Reports Logging Help

Logged in as: admin (logout)

Setup

- Networking
- Service**
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts
- Configuration Manager
- Upgrade Software
- Update License
- Start/Stop Service
- Reboot Appliance
- Shutdown Appliance

Service

Configuration In-Path Rules QoS WCCP Service Groups Asymmetric Routing

Check and modify your base service configuration.

In-Path

☒ Enable In-Path Support

Options:

☐ Enable External Traffic Redirection Support (Layer4/PBR/WCCP)

☐ Reset Existing Client Connections on Start Up

VLAN Tag ID: 0

Out-of-Path

☐ Enable Out-of-Path Support

Local Port: 7810

Authentication (Optional)

☐ Enable Authentication

Client Secret:

Server Secret:

Failover (Optional - Requires an Additional Appliance)

☒ Enable Failover Support

Mode: Master

Buddy IP Address: 10.0.0.3

Apply Save Reset

4. Apply and save the new configuration in the Management Console.
5. Begin optimization. View performance reports and system logs in the Management Console.

In-Path, Load Balanced, Layer-4 Switch


An in-path, load-balanced, Layer-4 switch deployment serves high traffic environments or environments with large numbers of active TCP connections. It handles failures, scales easily, and supports all protocols.

When you configure the HP EFS WAN Accelerator using a Layer-4 switch, you define the HP EFS WAN Accelerators as a pool where the Layer-4 switch redirects client and server traffic.

Only one WAN interface on the HP EFS WAN Accelerator is connected to the Layer-4 switch, and the HP EFS WAN Accelerator is configured to send and receive data through that interface.

The following figure illustrates the server-side vof the network where load balancing is required.

Figure 3-9. In-Path, Load-Balanced, Layer-4 Switch Deployment

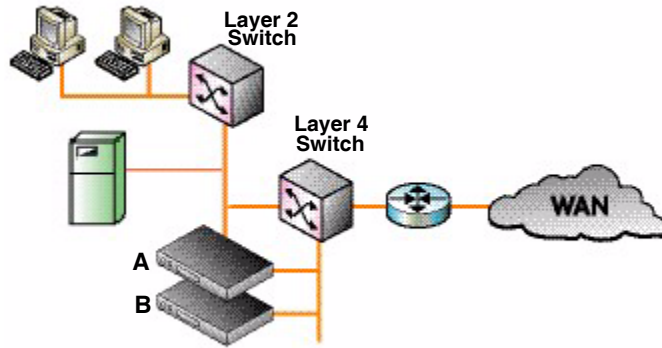

Basic Steps (Client-Side)

The client-side HP EFS WAN Accelerator is configured as an in-path device. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators”](#) on page 28.

Basic Steps (Server-Side)

Perform the following steps for each HP EFS WAN Accelerator in the cluster.

1. Mount and power on the HP EFS WAN Accelerator. For details see, [“Mounting the HP EFS WAN Accelerator to a Rack”](#) on page 21 and [“Powering On the HP EFS WAN Accelerator”](#) on page 25.
2. Connect to the HP EFS WAN Accelerator. For details see, [“Connecting to the HP EFS WAN Accelerator”](#) on page 26. Make sure you properly connect to the Layer-2 switch. For example:
 - ◆ On HP EFS WAN Accelerator A: plug the straight-through cable into the NIC1 (Primary) port of the HP EFS WAN Accelerator and connect it to the LAN port of the Layer-2 switch.
 - ◆ On HP EFS WAN Accelerator B: plug the straight-through cable into the NIC1 (Primary) port of the HP EFS WAN Accelerator and connect it to the LAN port of the Layer-2 switch.
3. Configure the HP EFS WAN Accelerator in an in-path configuration. For details see, [“Configuring In-Path HP EFS WAN Accelerators”](#) on page 28.
4. Connect the Layer-4 switch to the HP EFS WAN Accelerator:
 - ◆ On HP EFS WAN Accelerator A: plug the straight-through cable into the NIC1 (Primary) port of the HP EFS WAN Accelerator and the WAN port on the Layer-4 switch.

- ◆ On HP EFS WAN Accelerator B: plug the straight-through cable into the NIC1 (Primary) port of the HP EFS WAN Accelerator and the WAN port on the Layer-4 switch.
5. Connect to the Management Console to verify your configuration. For details see, [“Connecting to the Management Console” on page 33.](#)
 6. Enable Layer-4 switch support in the Setup: Service, Configuration page of the Management Console. For example:
 - ◆ Click **Enable External Traffic Redirection Support (Layer-4, WCCP, PBR).**

NOTE: The **Enable In-Path Support** check box is already checked—you specified in-path support in the configuration wizard.

Figure 3-10. Management Console Setup: Service, Configuration Page

Home Setup Reports Logging Help Logged in as: admin (logout)

Setup

- Networking
- Service**
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts
- Configuration Manager
- Upgrade Software
- Update License
- Start/Stop Service
- Reboot Appliance
- Shutdown Appliance

Service

Configuration In-Path Rules QoS WCCP Service Groups Asymmetric Routing

Check and modify your base service configuration.

In-Path

☒ Enable In-Path Support

Options:

☒ Enable External Traffic Redirection Support (Layer4/PBR/WCCP)

☐ Reset Existing Client Connections on Start Up

VLAN Tag ID:

Out-of-Path

☐ Enable Out-of-Path Support

Local Port:

Authentication (Optional)

☐ Enable Authentication

Client Secret:

Server Secret:

Failover (Optional - Requires an Additional Appliance)

☐ Enable Failover Support

Mode:

Buddy IP Address:


Apply Save Reset

7. Apply and save the new configuration in the Management Console.
8. Reboot the HP EFS WAN Accelerator in the Setup: Reboot Appliance page of the Management Console.
9. Begin optimization. View performance reports and system logs in the Management Console.

Out-of-Path Deployments

An out-of-path deployment is a network configuration in which the HP EFS WAN Accelerator is not in the direct path between the client and the server.

Figure 3-11. Out-of-Path Deployment

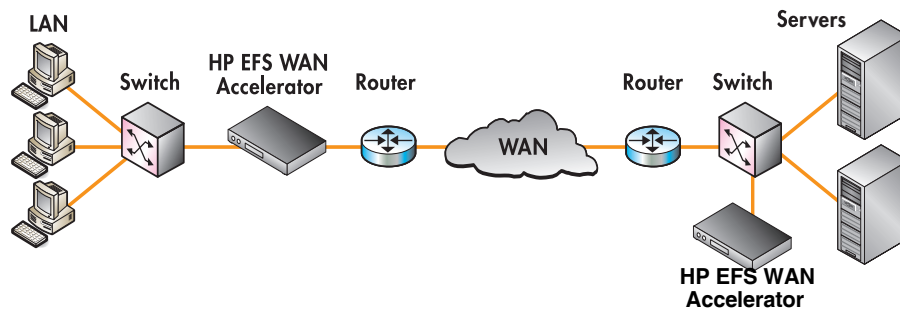

Typically, in an out-of-path deployment the client-side HP EFS WAN Accelerator is configured as an in-path interface and the server-side HP EFS WAN Accelerator is configured as an out-of-path interface.


Out-of-Path, Failover Support

In a two appliance out-of-path deployment, when both HP EFS WAN Accelerators are functioning properly, the connections traverse the master appliance. If the master HP EFS WAN Accelerator fails, subsequent connections traverse the backup HP EFS WAN Accelerator.

When the master HP EFS WAN Accelerator is restored, the next connection traverses the master HP EFS WAN Accelerator. If both HP EFS WAN Accelerators fail, the connection is passed through unoptimized to the server.

The following figure illustrates the server-side of the network where two HP EFS WAN Accelerators are deployed in an out-of-path configuration to ensure that data continues to be optimized if there is an error in the system.

Figure 3-12. Out-of-Path, Server-Side, Failover Support Deployment

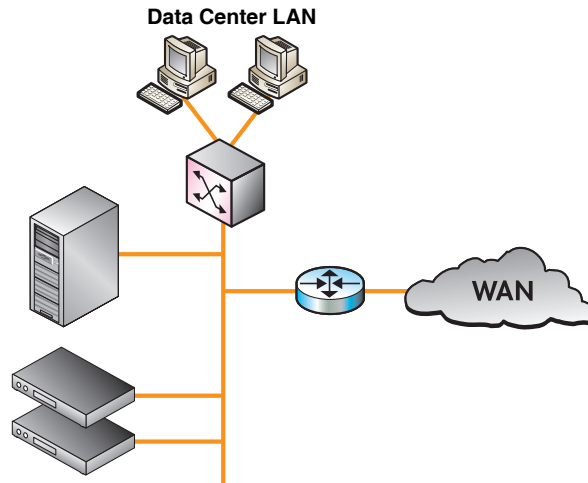

Basic Steps (Client-Side)

In an out-of-path, two HP EFS WAN Accelerators with failover support deployment, the client-side HP EFS WAN Accelerator is configured in an in-path configuration with fixed-target rules that point to the server-side, out-of-path HP EFS WAN Accelerators.

1. Configure the client-side HP EFS WAN Accelerator in a typical in-path configuration. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators”](#) on page 28.
2. Connect to the Management Console. For details, see [“Connecting to the Management Console”](#) on page 33.
3. Navigate to the Setup: Service, In-Path Rules, Fixed-Target page in the Management Console.

Figure 3-13. Management Console: Setup, Service, Configuration Page

Home Setup Reports Logging Help Logged in as: admin (logout)

Setup

- Networking
- **Service**
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts

- Configuration Manager
- Upgrade Software
- Update License

- Start/Stop Service
- Reboot Appliance
- Shutdown Appliance

Service

Configuration In-Path Rules QoS WCCP Service Groups Asymmetric Routing

Check and modify your in-path rules. By default, all traffic going through this appliance is optimized.

#	Action	Source	Destination	Port	VLAN ID	Target	Port
def	Auto Discover	all	all	all	all	--	--

Remove Selected Rules

Add New Rule: Auto Discover Fixed Target Pass Through

Fixed target rules directly specify out-of-path appliances near the target server.

Insert Rule Before: end

Source Subnet: 0.0.0.0 Netmask: 0.0.0.0

Destination Subnet: 0.0.0.0 Netmask: 0.0.0.0 Port: all

Target IP Address: 10.0.0.4 Port: 7810

Backup Target IP Address: 10.0.0.5 Port: 7810

VLAN Tag ID: All

Add Rule

Additional Options:

☒ Automatically Pass Through Traffic for Known Secure Ports

☒ Automatically Pass Through Traffic for Known Interactive Ports

Apply

Save Reset

4. To enable failover support for the out-of-path HP EFS WAN Accelerator, define a fixed-target rule that points to the appliance. For example:
 - ◆ Type the out-of-path, server-side HP EFS WAN Accelerator IP address and port in the **Target IP Address** and **Port** text boxes.
 - ◆ Type the backup HP EFS WAN Accelerator IP address and port in the **Backup Target IP Address** and **Port** text boxes.
5. Save and apply the new configuration in the Management Console.
6. Begin optimization. View performance reports and system logs in the Management Console.

Basic Steps (Server-Side)


The server-side HP EFS WAN Accelerator is configured as an out-of-path device. For detailed information, see [“Configuring Out-of-Path HP EFS WAN Accelerators” on page 35](#).

Out-of-Path, Static Cluster

An out-of-path, static cluster deployment is appropriate when an in-path deployment is not an option or you require LAN-side Gigabit Ethernet. This deployment handles failures and scales to very high traffic levels. You must configure the remote HP EFS WAN Accelerator.

The following figure illustrates the server-side of the network where two HP EFS WAN Accelerators are out-of-path interfaces and the client-side of the network where there are static clusters with in-path HP EFS WAN Accelerators.

Figure 3-14. Static Cluster Deployment

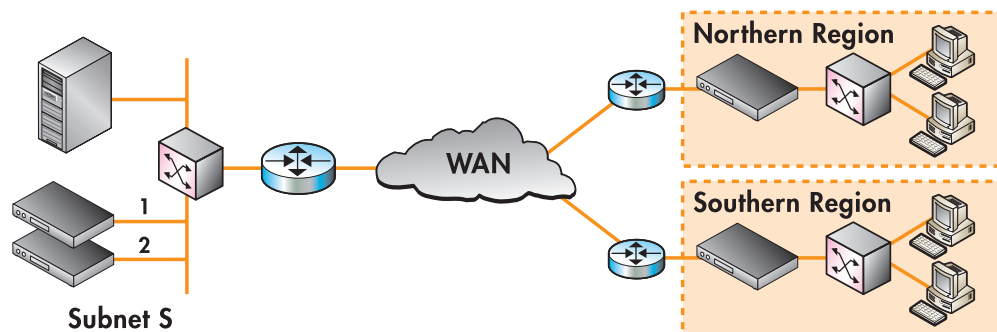

Basic Steps (Client-Side)

Perform the following steps for each HP EFS WAN Accelerator on the client-side of the network.

1. Configure the HP EFS WAN Accelerator in an in-path configuration. For details see, [“Configuring In-Path HP EFS WAN Accelerators” on page 28](#).
2. Connect to the Management Console to verify your configuration. For details see, [“Connecting to the Management Console” on page 33](#).
3. Navigate to the Setup: Service, In-Path Rules, Fixed-Target page in the Management Console.
4. Define fixed target rules for the set of HP EFS WAN Accelerators in each cluster of user sites in the Setup: Service, In Path Rules, Fixed-Target page. For example:
 - ◆ In the Northern region, for the HP EFS WAN Accelerators in the set, define HP EFS WAN Accelerator 1 as the fixed target for servers in Subnet S.

- ◆ In the Southern region, for all HP EFS WAN Accelerators in the set, define HP EFS WAN Accelerator 2 as the fixed target for Subnet S.

Figure 3-15. Management Console, Setup: In-Path, In-Path Rules, Fixed Target Page

Home Setup Reports Logging Help

Logged in as: admin (logout)

Setup

- Networking
- **Service** «
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts

• Configuration Manager

• Upgrade Software

• Update License

• Start/Stop Service

• Reboot Appliance

• Shutdown Appliance

Service

Configuration In-Path Rules QoS WCCP Service Groups Asymmetric Routing

Check and modify your in-path rules. By default, all traffic going through this appliance is optimized.

#	Action	Source	Destination	Port	VLAN ID	Target	Port
def	Auto Discover	all	all	all	all	--	--

Remove Selected Rules

Add New Rule: Auto Discover Fixed Target Pass Through

Fixed target rules directly specify out-of-path appliances near the target server.

Insert Rule Before: end

Source Subnet: 10.0.0.3 Netmask: 255.255.0.0

Destination Subnet: 10.10.12.1 Netmask: 255.255.0.0 Port: all

Target IP Address: Port: 7810

Backup Target IP Address: Port: 7810

VLAN Tag ID: All

Add Rule

Additional Options:

☒ Automatically Pass Through Traffic for Known Secure Ports

☒ Automatically Pass Through Traffic for Known Interactive Ports

Apply

Save Reset

5. Apply and save the new configuration in the Management Console.
6. Begin optimization. View performance reports and system logs in the Management Console.

Basic Steps (Server-Side)

For the server-side, redundant HP EFS WAN Accelerators, follow the procedures for an out-of-path, failover support deployment. For detailed information, see [“Out-of-Path, Failover Support” on page 55](#).

Mixed Deployments


The following section describes deployments that are both in-path and out-of-path. The following deployments display in-path and out-of-path characteristics:

- ◆ **Hybrid.** A hybrid deployment is a deployment in which the HP EFS WAN Accelerator is both in-path and out-of-path. This deployment is useful where the HP EFS WAN Accelerator must be referenced from remote sites as an out-of-path device (for example, to avoid mistaken auto-discovery or to bypass intermediary HP EFS WAN Accelerators).
- ◆ **Web Cache Communication Protocol (WCCP).** WCCP enables the client-side to have an out-of-path HP EFS WAN Accelerator. For example, if you have two routers or if there is not a logical place for the HP EFS WAN Accelerator. You can place the HP EFS WAN Accelerator logically in-path through the router so that they work together.
- ◆ **Policy Based Routing (PBR).** PBR enables you to redirect traffic to an HP EFS WAN Accelerator that is configured as an out-of-path interface. PBR allows you to define policies to route packets instead of relying on routing protocols. You define policies to redirect traffic to the HP EFS WAN Accelerator and policies to avoid loop-back.

Hybrid: In-Path and Out-of-Path

A hybrid deployment serves offices with one WAN routing point and users, but the HP EFS WAN Accelerator must be referenced from remote sites as an out-of-path device.

Figure 3-16. Hybrid: In-Path and Out-of-Path Deployment

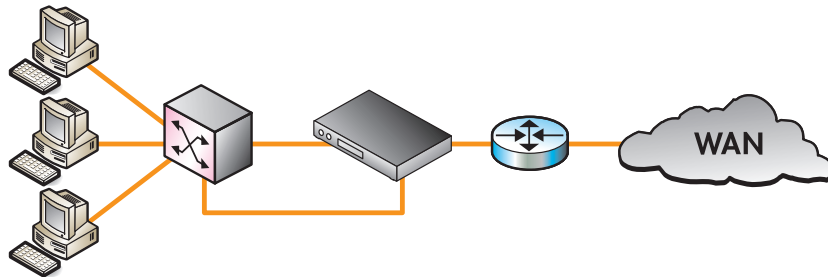

Basic Steps (Client-Side)

Perform the following steps for the HP EFS WAN Accelerator.

1. Configure the HP EFS WAN Accelerator in an out-of-path configuration. For details see, [“Configuring Out-of-Path HP EFS WAN Accelerators” on page 35.](#)
2. Connect to the Management Console to verify your configuration. For details see, [“Connecting to the Management Console” on page 33.](#)
3. Define fixed target rules. In the Setup: Service, In Path Rules, Fixed-Target page, define fixed target rules that optimize data for a specific subnet. For example:

Figure 3-17. Management Console, Setup: In-Path, In-Path Rules, Fixed Target Page

The screenshot shows the Management Console interface. The top navigation bar includes Home, Setup, Reports, Logging, and Help. The user is logged in as admin. The left sidebar shows the Setup menu with options like Networking, Service, Protocols, Alarms, Logging, Reports, Date & Time, Accounts, Configuration Manager, Upgrade Software, Update License, Start/Stop Service, Reboot Appliance, and Shutdown Appliance. The main content area is titled 'Service' and has tabs for Configuration, In-Path Rules, QoS, WCCP Service Groups, and Asymmetric Routing. The 'In-Path Rules' tab is selected, showing a table of rules. Below the table is a 'Remove Selected Rules' button. The 'Add New Rule' section has tabs for Auto Discover, Fixed Target, and Pass Through. The 'Fixed Target' tab is selected, showing a form to define a fixed target rule. The form includes fields for Source Subnet, Destination Subnet, Target IP Address, Backup Target IP Address, VLAN Tag ID, Netmask, and Port. The 'Additional Options' section has two checkboxes: 'Automatically Pass Through Traffic for Known Secure Ports' and 'Automatically Pass Through Traffic for Known Interactive Ports'. The 'Add Rule' button is at the bottom of the form. The 'Save' and 'Reset' buttons are at the bottom right of the page.

#	Action	Source	Destination	Port	VLAN ID	Target	Port
def	Auto Discover	all	all	all	all	--	--

Remove Selected Rules

Add New Rule: Auto Discover Fixed Target Pass Through

Fixed target rules directly specify out-of-path appliances near the target server.

Insert Rule Before: end

Source Subnet: 10.0.0.3 Netmask: 255.255.0.0

Destination Subnet: 10.10.12.1 Netmask: 255.255.0.0 Port: all

Target IP Address: Port: 7810

Backup Target IP Address: Port: 7810

VLAN Tag ID: All

Add Rule

Additional Options:

☒ Automatically Pass Through Traffic for Known Secure Ports

☒ Automatically Pass Through Traffic for Known Interactive Ports

Apply

Save Reset

4. Apply and save the new configuration in the Management Console.
5. Begin optimization. View performance reports and system logs in the Management Console.

Basic Steps (Server-Side)


The server-side HP EFS WAN Accelerator is configured as an in-path device. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators” on page 28.](#)

WCCP

WCCP establishes and maintains the transparent redirection of selected types of traffic flowing through a group of routers. If your network design requires you to configure the HP EFS WAN Accelerator as an out-of-path device, you can use WCCP to configure the HP EFS WAN Accelerator out-of-path, yet redirect traffic through it to ensure it is optimized. WCCP is cost-effective, simple to manage, and handles complex WAN interfaces by not interfering with fiber, dual routers, no switch-router links, and so forth.

IMPORTANT: HP recommends you use the HP EFS WAN Accelerator CLI to configure an HP EFS WAN Accelerator for WCCP. For detailed information about how to configure WCCP using the HP EFS WAN Accelerator CLI, see the *HP EFS WAN Accelerator Command-Line Interface Reference Manual*.

Figure 3-18. WCCP Deployment

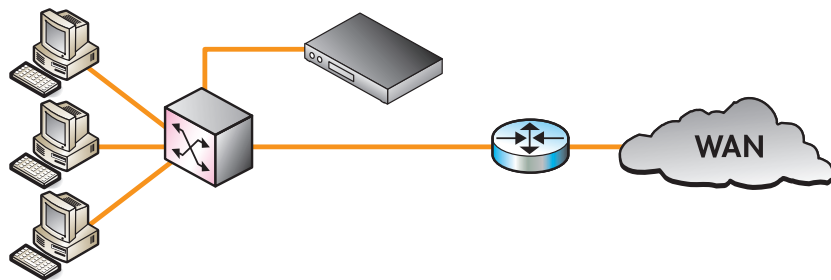

Basic Steps (Client-Side)

Perform the following steps for the client-side HP EFS WAN Accelerator. Configure the HP EFS WAN Accelerator in an in-path configuration. For details see, [“Configuring In-Path HP EFS WAN Accelerators” on page 28.](#)

6. Connect to the Management Console. For details see, [“Connecting to the Management Console” on page 33.](#)
7. Enable external traffic redirection in the Setup: Service, Configuration page of the Management Console.

Figure 3-19. Setup: Service, Configuration Page

Home Setup Reports Logging Help Logged in as: admin (logout)

Setup

- Networking
- **Service** «
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts
- Configuration Manager
- Upgrade Software
- Update License
- Start/Stop Service
- Reboot Appliance
- Shutdown Appliance

Service

Configuration In-Path Rules QoS WCCP Service Groups Asymmetric Routing

Check and modify your base service configuration.

In-Path

☒ Enable In-Path Support

Options:

☒ Enable External Traffic Redirection Support (Layer4/PBR/WCCP)

☐ Reset Existing Client Connections on Start Up

VLAN Tag ID:

Out-of-Path

☐ Enable Out-of-Path Support

Local Port:

Authentication (Optional)

☐ Enable Authentication

Client Secret:

Server Secret:

Failover (Optional - Requires an Additional Appliance)

☐ Enable Failover Support

Mode:

Buddy IP Address:

Apply Save Reset

8. Define WCCP service groups in the Setup: Service, WCCP Groups page.

Figure 3-20. Setup: Service, WCCP Service Groups Page

Home Setup Reports Logging Help Logged in as: admin (logout)

Setup

- Networking
- Service «
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts

Configuration In-Path Rules QoS WCCP Service Groups Asymmetric Routing

This page is optional. Check and modify your WCCP v2 service groups. Click on a service group to modify its settings.

Service Group ID	Priority	Weight	Scheme
No WCCP service groups.			

Remove Selected Groups

Add New Service Group:

Service Group ID: 123

Router IP: 10.0.0.4

Password:

Confirm Password:

Priority: 200

Weight: 6

Encapsulation Scheme: either

Add Group

WCCP v2 Global Settings

☐ Enable WCCP v2 Support

Multicast TTL: 1

Update Settings

Save Reset

9. Edit the service groups to define flags, ports, and routers in the Setup: Service, WCCP Groups, Service Group page.

Figure 3-21. Setup: Service, WCCP Groups Page

Home Setup Reports Logging Help Logged in as: admin (logout)

Setup

- Networking
- Service** «
- Protocols
- Alarms
- Logging
- Reports
- Date & Time
- Accounts

Configuration Manager (i)

- Upgrade Software
- Update License

Start/Stop Service

- Reboot Appliance
- Shutdown Appliance

Service

Configuration In-Path Rules QoS WCCP Service Groups

Service Group 123 [Return to Service Groups]

Check and modify the settings for service group 123.

Group Settings

Password:

Confirm Password:

Priority:

Weight:

Encapsulation Scheme: either

Flags

☐ Source IP Hash ☒ Destination IP Hash

☐ Source Port Hash ☐ Destination Port Hash

Port

No ports specified.

Add Port:

Routers

Router

☐ 10.0.0.0

Add Router IP:

10. Define WCCP policies on your router.
11. Save and apply the new configuration in the Management Console.
12. Begin optimization. View performance reports and system logs in the Management Console.

Basic Steps (Server-Side)

The server-side HP EFS WAN Accelerator is configured as an in-path device. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators”](#) on page 28.


PBR

Policy-Based routing (PBR) enables you to define policies to route packets instead of relying on routing protocols. You enable PBR to redirect traffic that you want to optimize to an HP EFS WAN Accelerator that is configured as an out-of-path device. You must configure your router in addition to the HP EFS WAN Accelerator.

TIP: HP recommends you use the HP EFS WAN Accelerator CLI to configure an HP EFS WAN Accelerator for PBR. For detailed information about how to configure PBR using the HP EFS WAN Accelerator CLI, see the *HP EFS WAN Accelerator Command-Line Interface Reference Manual*.

The following figure illustrates the client-side of the network where the HP EFS WAN Accelerator is configured as an out-of-path device and the router has been configured with policies that enable traffic redirection.

Figure 3-22. PBR Deployment

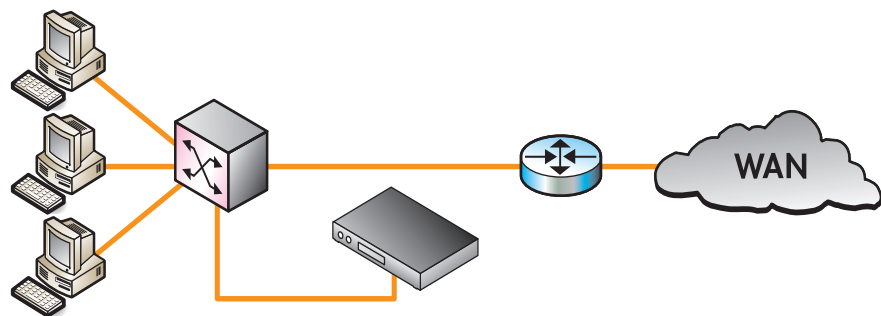

Basic Steps (Client-Side)

Perform the following steps for the client-side HP EFS WAN Accelerator.

1. Configure the HP EFS WAN Accelerator in an in-path configuration. For details see, [“Configuring In-Path HP EFS WAN Accelerators” on page 28.](#)
2. Connect to the Management Console. For details see, [“Connecting to the Management Console” on page 33.](#)
3. Enable external traffic redirection in the Setup: Service, Configuration page of the Management Console.

Figure 3-23. Setup: Service, Configuration Page

The screenshot displays the 'Setup: Service' configuration page in the Management Console. The left sidebar shows the navigation menu with 'Service' selected. The main content area is titled 'Service' and includes tabs for 'Configuration', 'In-Path Rules', 'QoS', 'WCCP Service Groups', and 'Asymmetric Routing'. The 'Configuration' tab is active, showing a message to 'Check and modify your base service configuration.' Below this, the 'In-Path' section is expanded, showing a checked checkbox for 'Enable In-Path Support'. Under 'Options', 'Enable External Traffic Redirection Support (Layer4/PBR/WCCP)' is also checked, while 'Reset Existing Client Connections on Start Up' is unchecked. A 'VLAN Tag ID' field is set to '0'. The 'Out-of-Path' section shows 'Enable Out-of-Path Support' is unchecked, with a 'Local Port' field set to '7810'. The 'Authentication (Optional)' section shows 'Enable Authentication' is unchecked, with empty fields for 'Client Secret' and 'Server Secret'. The 'Failover (Optional - Requires an Additional Appliance)' section shows 'Enable Failover Support' is unchecked, with a 'Mode' dropdown set to 'Master' and an empty 'Buddy IP Address' field. At the bottom right, there are 'Apply', 'Save', and 'Reset' buttons.

4. Define PBR policies on your router.
5. Save and apply the new configuration in the Management Console.
6. Begin optimization. View performance reports and system logs in the Management Console.

Basic Steps (Server-Side)

The server-side HP EFS WAN Accelerator is configured as an in-path device. For detailed information, see [“Configuring In-Path HP EFS WAN Accelerators” on page 28.](#)

In This Chapter

If the HP EFS WAN Accelerator sustains hardware failures, you can use the Quick Restore CD you received with your product to restore your appliance storage configuration and disk image to the original factory settings. This chapter explains the recovery procedure.

NOTE: Cached data and configuration changes you made to the system are not recovered.

Recovery Procedure

1. Insert the Quick Restore CD in the HP EFS WAN Accelerator or HP EFS WAN Accelerator Manager DVD-ROM drive.
2. Reboot the server by turning off and then turning on the power. The system boots and the CD loads.
3. When prompted by the system, select **R** to restore your appliance storage configuration and disk image to the factory settings.

CHAPTER 5

Replacing HP EFS WAN Accelerator Components

In This Chapter

The HP ProLiant DL320-510, DL320-1010, and DL320-2010 and the HP ProLiant DL380-3010 and DL380-5010 contain replaceable fans, disk drives, and power supply units. For replacement procedures, refer to either the *HP ProLiant DL320 Generation 3 Server Maintenance and Service Guide* or the *HP ProLiant DL380 Generation 4 Maintenance and Service Guide* available on the web from the link on the documentation CD-ROM that came with your product.

APPENDIX A

Technical Specifications and Regulatory Information

In This Appendix

Technical specifications and regulatory information are contained in the documentation for your product. Refer to either the *HP ProLiant DL320 Generation 3 Server User Guide* or the *HP ProLiant DL380 Generation 4 Server Reference and Troubleshooting Guide* available on the documentation set CD-ROM that came with your product for specific information.

APPENDIX B

HP EFS WAN Accelerator Ports

In This Appendix

This appendix describes the HP EFS WAN Accelerator default, secure, and interactive ports. It contains the following sections:

- ◆ [“Default Ports,”](#) next
- ◆ [“Commonly Optimized Ports”](#) on page 75
- ◆ [“Interactive Ports Automatically Forwarded by the HP EFS WAN Accelerator”](#) on page 76
- ◆ [“Secure Ports Automatically Forwarded by the HP EFS WAN Accelerator”](#) on page 76

Default Ports

The HP EFS WAN Accelerator uses the following default ports.

- ◆ In-Path Listening Port: 7800
- ◆ Out-of-Path Server Port: 7810
- ◆ Failover Port: 7820
- ◆ Exchange Port: 7830

Commonly Optimized Ports

The HP EFS WAN Accelerator by default optimizes all ports. If you do not want the HP EFS WAN Accelerator to optimize all ports for an in-path or out-of path configuration, you can specify specific ports for optimization.

Although these ports can vary according to your requirements, the following ports are commonly specified for in-path and out-of-path configurations:

- ◆ 80
- ◆ 135
- ◆ 139

- ◆ 445
- ◆ 7830

Interactive Ports Automatically Forwarded by the HP EFS WAN Accelerator

The following interactive ports are automatically forwarded by the HP EFS WAN Accelerator when you enable forwarding of interactive ports in the Management Console.

Port	Description
7	TCP ECHO
23	Telnet
37	UDP/Time
107	Remote Telnet Service
513	Remote Login
514	Shell
3389	MS WBT Server, TS/Remote Desktop
5631	PC Anywhere
5900-5903	VNC
6000	X11

For detailed information about how to set interactive port forwarding, see the *HP EFS WAN Accelerator Management Console User's Guide*.

Secure Ports Automatically Forwarded by the HP EFS WAN Accelerator

The following tables contain the secure ports that are automatically forwarded by the HP EFS WAN Accelerator when you enable forwarding of secure ports in the Management Console.

For detailed information about how to enable forwarding of secure ports, see the *HP EFS WAN Accelerator Management Console User's Guide*.

Type	Port	Description
ssh	22/tcp	SSH Remote Login Protocol
https	443/tcp	http protocol over TLS/SSL
smtps	465/tcp	SMTP over SSL (TLS)
nntp	563/tcp	nntp protocol over TLS/SSL (was snntp)
imap4-ssl	585/tcp	IMAP4+SSL (use 993 instead)
sshell	614/tcp	SSLshell
ldaps	636/tcp	ldap protocol over TLS/SSL (was sldap)
ftps-data	989/tcp	ftp protocol data over TLS/SSL
ftps	990/tcp	ftp protocol control over TLS/SSL
telnet	992/tcp	telnet protocol over TLS/SSL
imaps	993/tcp	imap4 protocol over TLS/SSL
pop3s	995/tcp	pop3 protocol over TLS/SSL (was spop3)
l2tp	1701/tcp	l2tp
pptp	1723/tcp	pptp
fttps	3713/tcp	TFTP over TLS

The following table contains the uncommon ports automatically forwarded by the HP EFS WAN Accelerator.

Type	Port	Description
nsiiops	261/tcp	IIOP Name Service over TLS/SSL
ddm-ssl	448/tcp	DDM-Remote DB Access Using Secure Sockets
corba-iiop-ssl	684/tcp	CORBA IIOP SSL
ieee-mms-ssl	695/tcp	IEEE-MMS-SSL
ircs	994/tcp	irc protocol over TLS/SSL
njenet-ssl	2252/tcp	NJENET using SSL
ssm-cssps	2478/tcp	SecurSight Authentication Server (SSL)
ssm-els	2479/tcp	SecurSight Event Logging Server (SSL)
giop-ssl	2482/tcp	Oracle GIOP SSL
ttc-ssl	2484/tcp	Oracle TTC SSL
syncserverssl	2679/tcp	Sync Server SSL
dicom-tls	2762/tcp	DICOM TLS
realsecure	2998/tcp	Real Secure
orbix-loc-ssl	3077/tcp	Orbix 2000 Locator SSL

Type	Port	Description
orbix-cfg-ssl	3078/tcp	Orbix 2000 Locator SSL
cops-tls	3183/tcp	COPS/TLS
csvr-sslproxy	3191/tcp	ConServR SSL Proxy
xnm-ssl	3220/tcp	XML NM over SSL
msft-gc-ssl	3269/tcp	Microsoft Global Catalog with LDAP/SSL
networklenss	3410/tcp	NetworkLens SSL Event
xtrms	3424/tcp	xTrade over TLS/SSL
jt400-ssl	3471/tcp	jt400-ssl
seclayer-tls	3496/tcp	securitylayer over tls
vt-ssl	3509/tcp	Virtual Token SSL Port
jboss-iiop-ssl	3529/tcp	JBoss IIOP/SSL
ibm-diradm-ssl	3539/tcp	IBM Directory Server SSL
can-nds-ssl	3660/tcp	Candle Directory Services using SSL
can-ferret-ssl	3661/tcp	Candle Directory Services using SSL
linktest-s	3747/tcp	LXPRO.COM LinkTest SSL
asap-tcp-tls	3864/tcp	asap/tls tcp port
topflow-ssl	3885/tcp	TopFlow SSL
sdo-tls	3896/tcp	Simple Distributed Objects over TLS
sdo-ssh	3897/tcp	Simple Distributed Objects over SSH
iss-mgmt-ssl	3995/tcp	ISS Management Svcs SSL
suucp	4031/tcp	UUCP over SSL
wsm-server-ssl	5007/tcp	wsm server ssl
sip-tls	5061/tcp	SIP-TLS
imqtunnels	7674/tcp	iMQ SSL tunnel
davsrscs	9802/tcp	WebDAV Source TLS/SSL
intrepid-ssl	11751/tcp	Intrepid SSL
rets-ssl	12109/tcp	RETS over SSL

APPENDIX C

Software Licenses

In This Appendix

This appendix lists the copyrights and licenses for the software used in the development of the HP EFS WAN Accelerator software. It also contains the copyright and license agreement for certain free libraries used in the development of the HP EFS WAN Accelerator software.

Apache

Copyright (c) 2000-2003 The Apache Software Foundation. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by the Apache Software Foundation (<http://www.apache.org/>).

The Apache add-on components that we used have the following copyrights and requirements. Unless otherwise noted, these are also subject to the requirements of the basic license listed above:

(server/util_md5.c) Portions Copyright (C) 1995, Board of Trustees of the University of Illinois

Original Code Copyright (C) 1994, Jeff Hostetler, Spyglass, Inc.

Portions of Content-MD5 code Copyright (C) 1993, 1994 by Carnegie Mellon University (see Copyright below).

Portions of Content-MD5 code Copyright (C) 1991 Bell Communications Research, Inc. (Bellcore) (see Copyright below).

Portions extracted from mpack, John G. Myers - jgm+@cmu.edu

Content-MD5 Code contributed by Martin Hamilton (martin@net.lut.ac.uk)

Portions (C) Copyright 1993,1994 by Carnegie Mellon University. All rights reserved.

Portions Copyright (c) 1991 Bell Communications Research, Inc. (Bellcore)

(srclib/apr/passwd/apr_md5.c)

(srclib/apr-util/include/apr_md5.h)

(srclib/apr-util/include/apr_md4.h)

(srclib/apr-util/crypto/apr_md4.c)

Copyright (C) 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind. These notices must be retained in any copies of any part of this documentation and/or software.

(srclib/pcre/*)

Regular expression support is provided by the PCRE library package, which is open source software, written by Philip Hazel, and copyright by the University of Cambridge, England.

(expat XML parser)

Copyright (c) 1998, 1999, 2000 Thai Open Source Software Center Ltd. and Clark Cooper.

bsdstr.c

Copyright (c) 1998 Todd C. Miller (Todd.Miller@courtesan.com). All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Less

Copyright (C) 1984-2002 Mark Nudelman.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice in the documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Libevent

Copyright 2000-2002 Niels Provos (provos@citi.umich.edu). All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

LibGD

Portions copyright 1994, 1995, 1996, 1997, 1998, 1999, 2000, 2001, 2002 by Cold Spring Harbor Laboratory. Funded under Grant P41-RR02188 by the National Institutes of Health.

Portions copyright 1996, 1997, 1998, 1999, 2000, 2001, 2002 by Boutell.Com, Inc.

Portions relating to GD2 format copyright 1999, 2000, 2001, 2002 Philip Warner.

Portions relating to PNG copyright 1999, 2000, 2001, 2002 Greg Roelofs.

Portions relating to gdtft.c copyright 1999, 2000, 2001, 2002 John Ellson (ellson@graphviz.org).

Portions relating to gdft.c copyright 2001, 2002 John Ellson (ellson@graphviz.org).

Portions relating to JPEG and to color quantization copyright 2000, 2001, 2002, Doug Becker and copyright (C) 1994, 1995, 1996, 1997, 1998, 1999, 2000, 2001, 2002, Thomas G. Lane. This software is based in part on the work of the Independent JPEG Group. See the file README-JPEG.TXT for more information.

Portions relating to WBMP copyright 2000, 2001, 2002 Maurice Szmurlo and Johan Van den Brande.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Libtecla

Copyright (c) 2000, 2001 by Martin C. Shepherd. All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, provided that the above copyright notice(s) and this permission notice appear in all copies of the Software and that both the above copyright notice(s) and this permission notice appear in supporting documentation.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR HOLDERS INCLUDED IN THIS NOTICE BE LIABLE FOR ANY CLAIM, OR ANY SPECIAL INDIRECT OR CONSEQUENTIAL DAMAGES, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Except as contained in this notice, the name of a copyright holder shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without prior written authorization of the copyright holder.

md5, md5.cc

Copyright (c) 1995 University of Southern California. All rights reserved.

Redistribution and use in source and binary forms are permitted provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that the software was developed by the University of Southern California, Information Sciences Institute. The name of the University may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Copyright (C) 1991-2, RSA Data Security, Inc. Created 1991. All rights reserved.

License to copy and use this software is granted provided that it is identified as the "RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing this software or this function.

License is also granted to make and use derivative works provided that such works are identified as "derived from the RSA Data Security, Inc. MD5 Message-Digest Algorithm" in all material mentioning or referencing the derived work.

RSA Data Security, Inc. makes no representations concerning either the merchantability of this software or the suitability of this software for any particular purpose. It is provided "as is" without express or implied warranty of any kind.

These notices must be retained in any copies of any part of this documentation and/or software.

my_getopt.{c,h}

Copyright 1997, 2000, 2001, 2002, Benjamin Sittler.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

NET-SNMP

Copyright 1989, 1991, 1992 by Carnegie Mellon University. All rights reserved.

Derivative Work - 1996, 1998-2000 Copyright 1996, 1998-2000 The Regents of the University of California. All rights reserved.

Copyright (c) 2001-2003, Networks Associates Technology, Inc. All rights reserved.

Portions of this code are copyright (c) 2001-2003, Cambridge Broadband Ltd. All rights reserved.

Copyright 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

This distribution may include materials developed by third parties. Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

OpenSSH

Portions Copyright (c) 1995 Tatu Ylonen (ylo@cs.hut.fi), Espoo, Finland. All rights reserved.

Portions Copyright (c) 1999 Niels Provos. All rights reserved.

Portions Copyright (c) 2000, 2001, 2002 Markus Friedl. All rights reserved.

Portions Copyright (c) 1995,1999 Theo de Raadt. All rights reserved.

Portions Copyright (c) 1999 Dug Song. All rights reserved.

Portions Copyright (c) 2002 Daniel Kouril. All rights reserved.

Portions Copyright (c) 2000 Damien Miller. All rights reserved.

Portions Copyright (c) 2002 Chris Adams. All rights reserved.

Portions Copyright (c) 2001 Per Allansson. All rights reserved.

Portions Copyright (c) 1998 CORE SDI S.A., Buenos Aires, Argentina.

Portions Copyright (c) 2001 Kevin Steves. All rights reserved.

Portions Copyright (c) 2000 Andre Lucas. All rights reserved.

Portions Copyright (c) 1998 Todd C. Miller portions Copyright (c) 1996 Jason Downs.

Portions Copyright (c) 1999 Aaron Campbell. All rights reserved.

Portions Copyright (c) 1983, 1990, 1992, 1993, 1995 The Regents of the University of California. All rights reserved.

Portions Copyright (c) 2002 Nils Nordman. All rights reserved.

This distribution may include materials developed by third parties. Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes software developed by the University of California, Berkeley and its contributors.

ptmalloc

Copyright (c) 2001 Wolfram Gloger.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that (i) the above copyright notices and this permission notice appear in all copies of the software and related documentation, and (ii) the name of Wolfram Gloger may not be used in any advertising or publicity relating to the software.

THE SOFTWARE IS PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EXPRESS, IMPLIED OR OTHERWISE, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT SHALL WOLFRAM GLOGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER OR NOT ADVISED OF THE POSSIBILITY OF DAMAGE, AND ON ANY THEORY OF LIABILITY, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Vixie-Cron

Copyright 1988,1990,1993,1994 by Paul Vixie. All rights reserved.

Distribute freely, except: don't remove my name from the source or documentation (don't take credit for my work), mark your changes (don't get me blamed for your possible bugs), don't alter or remove this notice. May be sold if buildable source is provided to buyer. No warranty of any kind, express or implied, is included with this software; use at your own risk, responsibility for damages (if any) to anyone resulting from the use of this software rests entirely with the user.

ZILE

Copyright (c) 1997-2001 Sandro Sigala. Copyright (c) 2003 Reuben Thomas.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED ``AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Busybox, Linux Kernel, and sSMTP

Busybox Copyright (c) Eric Andersen; Linux Kernel Copyright (c) Linus Torvalds; sSMTP Copyright (c) Mark Ryan, Hugo Haas, Christoph Lameter, and Dave Collier-Brown.

Busybox, Linux Kernel, and sSMTP are licensed under the GNU General Public License:

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991.

Copyright (C) 1989, 1991 Free Software Foundation, Inc. 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it.

For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all. The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.

b) You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.

c) If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

a) Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

b) Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,

c) Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. END OF TERMS AND CONDITIONS

Software Libraries

Certain libraries were used in the development of this software, licensed under GNU Lesser General Public License. For a list of libraries and source material (where required), see the HP technical support site at <http://www.HP.com>.

GNU LESSER GENERAL PUBLIC LICENSE

Version 2.1, February 1999.

Copyright (C) 1991, 1999 Free Software Foundation, Inc., 59 Temple Place, Suite 330, Boston, MA 02111-1307 USA.

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

[This is the first released version of the Lesser GPL. It also counts as the successor of the GNU Library Public License, version 2, hence the version number 2.1.]

Preamble

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public Licenses are intended to guarantee your freedom to share and change free software--to make sure the software is free for all its users.

This license, the Lesser General Public License, applies to some specially designated software packages--typically libraries--of the Free Software Foundation and other authors who decide to use it. You can use it too, but we suggest you first think carefully about whether this license or the ordinary General Public License is the better strategy to use in any particular case, based on the explanations below.

When we speak of free software, we are referring to freedom of use, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish); that you receive source code or can get it if you want it; that you can change the software and use pieces of it in new free programs; and that you are informed that you can do these things.

To protect your rights, we need to make restrictions that forbid distributors to deny you these rights or to ask you to surrender these rights. These restrictions translate to certain responsibilities for you if you distribute copies of the library or if you modify it.

For example, if you distribute copies of the library, whether gratis or for a fee, you must give the recipients all the rights that we gave you. You must make sure that they, too, receive or can get the source code. If you link other code with the library, you must provide complete object files to the recipients, so that they can relink them with the library after making changes to the library and recompiling it. And you must show them these terms so they know their rights.

We protect your rights with a two-step method: (1) we copyright the library, and (2) we offer you this license, which gives you legal permission to copy, distribute and/or modify the library.

To protect each distributor, we want to make it very clear that there is no warranty for the free library. Also, if the library is modified by someone else and passed on, the recipients should know that what they have is not the original version, so that the original author's reputation will not be affected by problems that might be introduced by others.

Finally, software patents pose a constant threat to the existence of any free program. We wish to make sure that a company cannot effectively restrict the users of a free program by obtaining a restrictive license from a patent holder. Therefore, we insist that any patent license obtained for a version of the library must be consistent with the full freedom of use specified in this license.

Most GNU software, including some libraries, is covered by the ordinary GNU General Public License. This license, the GNU Lesser General Public License, applies to certain designated libraries, and is quite different from the ordinary General Public License. We use this license for certain libraries in order to permit linking those libraries into non-free programs.

When a program is linked with a library, whether statically or using a shared library, the combination of the two is legally speaking a combined work, a derivative of the original library. The ordinary General Public License therefore permits such linking only if the entire combination fits its criteria of freedom. The Lesser General Public License permits more lax criteria for linking other code with the library.

We call this license the "Lesser" General Public License because it does Less to protect the user's freedom than the ordinary General Public License. It also provides other free software developers Less of an advantage over competing non-free programs. These disadvantages are the reason we use the ordinary General Public License for many libraries. However, the Lesser license provides advantages in certain special circumstances.

For example, on rare occasions, there may be a special need to encourage the widest possible use of a certain library, so that it becomes a de-facto standard. To achieve this, non-free programs must be allowed to use the library. A more frequent case is that a free library does the same job as widely used non-free libraries. In this case, there is little to gain by limiting the free library to free software only, so we use the Lesser General Public License.

In other cases, permission to use a particular library in non-free programs enables a greater number of people to use a large body of free software. For example, permission to use the GNU C Library in non-free programs enables many more people to use the whole GNU operating system, as well as its variant, the GNU/Linux operating system.

Although the Lesser General Public License is Less protective of the users' freedom, it does ensure that the user of a program that is linked with the Library has the freedom and the wherewithal to run that program using a modified version of the Library.

The precise terms and conditions for copying, distribution and modification follow. Pay close attention to the difference between a "work based on the library" and a "work that uses the library". The former contains code derived from the library, whereas the latter must be combined with the library in order to run.

GNU LESSER GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License Agreement applies to any software library or other program which contains a notice placed by the copyright holder or other authorized party saying it may be distributed under the terms of this Lesser General Public License (also called "this License"). Each licensee is addressed as "you".

A "library" means a collection of software functions and/or data prepared so as to be conveniently linked with application programs (which use some of those functions and data) to form executables.

The "Library", below, refers to any such software library or work which has been distributed under these terms. A "work based on the Library" means either the Library or any derivative work under copyright law: that is to say, a work containing the Library or a portion of it, either verbatim or with modifications and/or translated straightforwardly into another language. (Hereinafter, translation is included without limitation in the term "modification".)

"Source code" for a work means the preferred form of the work for making modifications to it. For a library, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the library.

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running a program using the Library is not restricted, and output from such a program is covered only if its contents constitute a work based on the Library (independent of the use of the Library in a tool for writing it). Whether that is true depends on what the Library does and what the program that uses the Library does.

1. You may copy and distribute verbatim copies of the Library's complete source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and distribute a copy of this License along with the Library.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Library or any portion of it, thus forming a work based on the Library, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

a) The modified work must itself be a software library.

b) You must cause the files modified to carry prominent notices stating that you changed the files and the date of any change.

c) You must cause the whole of the work to be licensed at no charge to all third parties under the terms of this License.

d) If a facility in the modified Library refers to a function or a table of data to be supplied by an application program that uses the facility, other than as an argument passed when the facility is invoked, then you must make a good faith effort to ensure that, in the event an application does not supply such function or table, the facility still operates, and performs whatever part of its purpose remains meaningful.

(For example, a function in a library to compute square roots has a purpose that is entirely well-defined independent of the application. Therefore, Subsection 2d requires that any application-supplied function or table used by this function must be optional: if the application does not supply it, the square root function must still compute square roots.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Library, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Library, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Library.

In addition, mere aggregation of another work not based on the Library with the Library (or with a work based on the Library) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may opt to apply the terms of the ordinary GNU General Public License instead of this License to a given copy of the Library. To do this, you must alter all the notices that refer to this License, so that they refer to the ordinary GNU General Public License, version 2, instead of to this License. (If a newer version than version 2 of the ordinary GNU General Public License has appeared, then you can specify that version instead if you wish.) Do not make any other change in these notices.

Once this change is made in a given copy, it is irreversible for that copy, so the ordinary GNU General Public License applies to all subsequent copies and derivative works made from that copy.

This option is useful when you wish to copy part of the code of the Library into a program that is not a library.

4. You may copy and distribute the Library (or a portion or derivative of it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange.

If distribution of object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place satisfies the requirement to distribute the source code, even though third parties are not compelled to copy the source along with the object code.

5. A program that contains no derivative of any portion of the Library, but is designed to work with the Library by being compiled or linked with it, is called a "work that uses the Library". Such a work, in isolation, is not a derivative work of the Library, and therefore falls outside the scope of this License.

However, linking a "work that uses the Library" with the Library creates an executable that is a derivative of the Library (because it contains portions of the Library), rather than a "work that uses the library". The executable is therefore covered by this License. Section 6 states terms for distribution of such executables.

When a "work that uses the Library" uses material from a header file that is part of the Library, the object code for the work may be a derivative work of the Library even though the source code is not. Whether this is true is especially significant if the work can be linked without the Library, or if the work is itself a library. The threshold for this to be true is not precisely defined by law.

If such an object file uses only numerical parameters, data structure layouts and accessors, and small macros and small inline functions (ten lines or less in length), then the use of the object file is unrestricted, regardless of whether it is legally a derivative work. (Executables containing this object code plus portions of the Library will still fall under Section 6.)

Otherwise, if the work is a derivative of the Library, you may distribute the object code for the work under the terms of Section 6. Any executables containing that work also fall under Section 6, whether or not they are linked directly with the Library itself.

6. As an exception to the Sections above, you may also combine or link a "work that uses the Library" with the Library to produce a work containing portions of the Library, and distribute that work under terms of your choice, provided that the terms permit modification of the work for the customer's own use and reverse engineering for debugging such modifications.

You must give prominent notice with each copy of the work that the Library is used in it and that the Library and its use are covered by this License. You must supply a copy of this License. If the work during execution displays copyright notices, you must include the copyright notice for the Library among them, as well as a reference directing the user to the copy of this License. Also, you must do one of these things:

- a) Accompany the work with the complete corresponding machine-readable source code for the Library including whatever changes were used in the work (which must be distributed under

Sections 1 and 2 above); and, if the work is an executable linked with the Library, with the complete machine-readable "work that uses the Library", as object code and/or source code, so that the user can modify the Library and then relink to produce a modified executable containing the modified Library. (It is understood that the user who changes the contents of definitions files in the Library will not necessarily be able to recompile the application to use the modified definitions.)

- b) Use a suitable shared library mechanism for linking with the Library. A suitable mechanism is one that (1) uses at run time a copy of the library already present on the user's computer system, rather than copying library functions into the executable, and (2) will operate properly with a modified version of the library, if the user installs one, as long as the modified version is interface-compatible with the version that the work was made with.

- c) Accompany the work with a written offer, valid for at least three years, to give the same user the materials specified in Subsection 6a, above, for a charge no more than the cost of performing this distribution.

- d) If distribution of the work is made by offering access to copy from a designated place, offer equivalent access to copy the above specified materials from the same place.

- e) Verify that the user has already received a copy of these materials or that you have already sent this user a copy.

For an executable, the required form of the "work that uses the Library" must include any data and utility programs needed for reproducing the executable from it. However, as a special exception, the materials to be distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

It may happen that this requirement contradicts the license restrictions of other proprietary libraries that do not normally accompany the operating system. Such a contradiction means you cannot use both them and the Library together in an executable that you distribute.

7. You may place library facilities that are a work based on the Library side-by-side in a single library together with other library facilities not covered by this License, and distribute such a combined library, provided that the separate distribution of the work based on the Library and of the other library facilities is otherwise permitted, and provided that you do these two things:

- a) Accompany the combined library with a copy of the same work based on the Library, uncombined with any other library facilities. This must be distributed under the terms of the Sections above.

- b) Give prominent notice with the combined library of the fact that part of it is a work based on the Library, and explaining where to find the accompanying uncombined form of the same work.

8. You may not copy, modify, sublicense, link with, or distribute the Library except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense, link with, or distribute the Library is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

9. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Library or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Library (or any work based on the Library), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Library or works based on it.

10. Each time you redistribute the Library (or any work based on the Library), the recipient automatically receives a license from the original licensor to copy, distribute, link with or modify the Library subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties with this License.

11. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Library at all. For example, if a patent license would not permit royalty-free redistribution of the Library by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Library.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply, and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

12. If the distribution and/or use of the Library is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Library under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

13. The Free Software Foundation may publish revised and/or new versions of the Lesser General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns.

Each version is given a distinguishing version number. If the Library specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Library does not specify a license version number, you may choose any version ever published by the Free Software Foundation.

14. If you wish to incorporate parts of the Library into other free programs whose distribution conditions are incompatible with these, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

15. BECAUSE THE LIBRARY IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE LIBRARY, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE LIBRARY "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE LIBRARY IS WITH YOU. SHOULD THE LIBRARY PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

16. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE LIBRARY AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE LIBRARY (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE LIBRARY TO OPERATE WITH ANY OTHER SOFTWARE), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS.

Glossary

Bandwidth. The upper limit on the amount of data, typically in kilobits per second (kbps), that can pass through a network connection. Greater bandwidth indicates faster data transfer capability.

CIFS. Common Internet File System. CIFS is the remote file system access protocol used by Windows servers and clients to share files across the network.

DHCP. Dynamic Host Configuration Protocol. Software that automatically assigns IP addresses to client stations logging onto a TCP/IP network.

Domain. In the Internet, a portion of the Domain Name Service (DNS) that refers to groupings of networks based on the type of organization or geography.

DNS. Domain Name Service. System used in the Internet for translating names of network nodes into IP addresses. A Domain Name Server notifies hosts of other host IP addresses, associating host names with IP addresses.

Ethernet. The most widely used Local Area Network (LAN) access method.

Host. A computer or other computing device that resides on a network.

Host address. The IP address assigned to each computer attached to the network.

Host name. Name given to a computer, usually by DNS.

HTTP. HyperText Transport Protocol. The protocol used by Web browsers to communicate with Web servers.

HTTPS. HyperText Transport Protocol Secure. The protocol for accessing a secure Web server. Using HTTPS directs the message to a secure port number to be managed by a security protocol.

IP. Internet protocol. Network layer protocol in the TCP/IP stack that enables a connectionless internetwork service.

IP address. In IP version 4 (IPv4), a 32-bit address assigned to hosts using the IP protocol. Also called an Internet address.

Netmask. A 32-bit mask which shows how an Internet address is divided into network, subnet, and host parts. The netmask has ones in the bit positions in the 32-bit address which are used for the network and subnet parts, and zeros for the host part. The mask must contain at least the standard network portion (as determined by the class of the address), and the subnet field should be contiguous with the network portion.

NFS. Network File System. The file sharing protocol in a UNIX network.

SNMP. Simple Network Management Protocol. A widely used network monitoring and control protocol. Data is passed from SNMP agents, which are hardware or software processes reporting activity in each network device (hub, router, bridge, and so forth) to the workstation console used to oversee the network.

TCP. Transmission Control Protocol. The error correcting Transport layer (Layer 4) in the TCP/IP protocol suite.

TCP/IP. Transmission Control Protocol/Internet Protocol. The protocol suite used in the Internet, intranets, and extranets.

Index

A

Appliance

- basic steps for deploying 17
- connecting the power 25
- connecting to 26
- connecting to the Management Console 33
- connecting to your network 32
- default ports 75
- in-path configurations 17
- installing 17
- interactive ports supported 76
- mounting on to a rack 21
- overview of 13
- preparing your site 19
- required information 20
- required tools and equipment 19
- secure ports supported 76
- verifying connections 33
- verifying your configuration 34

Auto-discovery rules, overview of 13

B

Bypass 14

Bypass mode, overview of 14

C

- Configuration, verifying 34
- Connecting the power 25
- Connecting to the appliance 26
- Connecting to your network 32
- Connections, verifying 33

D

- Default ports 75
- Definition of terms 13
- Disaster recovery 69

E

- Equipment guidelines 10
- Ethernet network compatibility 8

F

Failover 14

Fail-through support 14

Fixed target rules, overview of 14

H

HP

storage web site 12

I

- Installation instructions 17
- Interactive ports 76

M

Management Console, connecting 33

O

- Online documentation 9
- Optimization 13

P

- Pass-through 14
- Ports, commonly optimized 75
- Ports, default 75
- ports, Interactive ports forwarded 76
- ports, Secure ports forwarded 76
- Product inventory 19

Q

Quick Restore CD 69

R

- Rack guidelines 10
- Rack, mounting 21
- Recovering from disaster 69
- Related reading 9
- Required configuration information 20
- Restoring the system 69

S

- Safety guidelines 10
- Scalable data referencing 13
- Secure ports 76

T

Tools and equipment, required 19

W
Welcome page 34